

A  
B  
C

# SECTION **WW**

## WIPER & WASHER

### CONTENTS

<p><b>BASIC INSPECTION</b> ..... 3</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 3</p> <p style="padding-left: 20px;">Work Flow .....3</p> <p><b>FUNCTION DIAGNOSIS</b> ..... 4</p> <p><b>FRONT WIPER AND WASHER SYSTEM</b> ..... 4</p> <p style="padding-left: 20px;">System Diagram .....4</p> <p style="padding-left: 20px;">System Description .....4</p> <p style="padding-left: 20px;">Component Parts Location .....7</p> <p style="padding-left: 20px;">Component Description .....7</p> <p><b>REAR WIPER AND WASHER SYSTEM</b> ..... 8</p> <p style="padding-left: 20px;">System Diagram .....8</p> <p style="padding-left: 20px;">System Description .....8</p> <p style="padding-left: 20px;">Component Parts Location .....10</p> <p style="padding-left: 20px;">Component Description .....10</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....11</p> <p><b>COMMON ITEM</b> ..... 11</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) ..... 11</p> <p><b>WIPER</b> ..... 11</p> <p style="padding-left: 20px;">WIPER : CONSULT-III Function (BCM - WIPER)... 11</p> <p><b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....13</p> <p style="padding-left: 20px;">Diagnosis Description ..... 13</p> <p style="padding-left: 20px;">CONSULT - III Function (IPDM E/R) ..... 15</p> <p><b>COMPONENT DIAGNOSIS</b> .....18</p> <p><b>WIPER AND WASHER FUSE</b> .....18</p> <p style="padding-left: 20px;">Description ..... 18</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 18</p> <p><b>FRONT WIPER MOTOR LO CIRCUIT</b> .....19</p> <p style="padding-left: 20px;">Component Function Check ..... 19</p> <p style="padding-left: 20px;">Diagnosis Procedure ..... 19</p> <p><b>FRONT WIPER MOTOR HI CIRCUIT</b> .....21</p>	<p style="text-align: right;">D E F G H I J K</p> <p style="padding-left: 20px;">Component Function Check .....21</p> <p style="padding-left: 20px;">Diagnosis Procedure .....21</p> <p><b>FRONT WIPER AUTO STOP SIGNAL CIRCUIT</b> .....23</p> <p style="padding-left: 20px;">Component Function Check .....23</p> <p style="padding-left: 20px;">Diagnosis Procedure .....23</p> <p><b>FRONT WIPER MOTOR GROUND CIRCUIT</b> ...25</p> <p style="padding-left: 20px;">Diagnosis Procedure .....25</p> <p><b>WASHER SWITCH</b> .....26</p> <p style="padding-left: 20px;">Description .....26</p> <p style="padding-left: 20px;">Component Inspection .....26</p> <p><b>REAR WIPER MOTOR CIRCUIT</b> .....28</p> <p style="padding-left: 20px;">Component Function Check .....28</p> <p style="padding-left: 20px;">Diagnosis Procedure .....28</p> <p><b>REAR WIPER AUTO STOP SIGNAL CIRCUIT</b> .....30</p> <p style="padding-left: 20px;">Component Function Check .....30</p> <p style="padding-left: 20px;">Diagnosis Procedure .....30</p> <p><b>FRONT WIPER AND WASHER SYSTEM</b> .....31</p> <p style="padding-left: 20px;">Wiring Diagram .....31</p> <p><b>REAR WIPER AND WASHER SYSTEM</b> .....36</p> <p style="padding-left: 20px;">Wiring Diagram .....36</p> <p><b>ECU DIAGNOSIS</b> .....41</p> <p><b>BCM (BODY CONTROL MODULE)</b> .....41</p> <p style="padding-left: 20px;">Reference Value .....41</p> <p style="padding-left: 20px;">Terminal Layout .....43</p> <p style="padding-left: 20px;">Physical Values .....43</p> <p style="padding-left: 20px;">Wiring Diagram .....49</p> <p style="padding-left: 20px;">Fail Safe .....52</p> <p style="padding-left: 20px;">DTC Inspection Priority Chart .....53</p> <p style="padding-left: 20px;">DTC Index .....53</p> <p><b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....55</p>
---	--



Reference Value .....	55	<b>PRECAUTION .....</b>	<b>73</b>
Terminal Layout .....	57	<b>PRECAUTION .....</b>	<b>73</b>
Physical Values .....	57	Precaution for Supplemental Restraint System	
Wiring Diagram .....	61	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
Fail Safe .....	64	SIONER" .....	73
DTC Index .....	66	<b>ON-VEHICLE REPAIR .....</b>	<b>74</b>
<b>SYMPTOM DIAGNOSIS .....</b>	<b>67</b>	<b>FRONT WIPER AND WASHER SYSTEM .....</b>	<b>74</b>
<b>WIPER AND WASHER SYSTEM SYMPTOMS</b>	<b>... 67</b>	Removal and Installation .....	74
Symptom Table .....	67	Washer Hose Layout .....	78
<b>NORMAL OPERATING CONDITION .....</b>	<b>70</b>	Washer Nozzle Adjustment .....	79
Description .....	70	<b>REAR WIPER AND WASHER SYSTEM .....</b>	<b>80</b>
<b>FRONT WIPER DOES NOT OPERATE .....</b>	<b>71</b>	Removal and Installation .....	80
Description .....	71	Rear Washer Nozzle Adjustment .....	84
Diagnosis Procedure .....	71		

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003084530

DETAILED FLOW

#### 1. LISTEN TO CUSTOMER COMPLAINT

Listen to customer complaint. Get detailed information about the conditions and environment when the symptom occurs.

>> GO TO 2

#### 2. VERIFY THE SYMPTOM WITH OPERATIONAL CHECK

Verify the symptom with operational check. Refer to [WW-13, "Diagnosis Description"](#).

>> GO TO 3

#### 3. GO TO APPROPRIATE TROUBLE DIAGNOSIS

Go to appropriate trouble diagnosis. Refer to [WW-67, "Symptom Table"](#).

>> GO TO 4

#### 4. REPAIR OR REPLACE

Repair or replace the specific parts.

>> GO TO 5

#### 5. FINAL CHECK

Final check.

Is inspection result normal?

YES >> Inspection End

NO >> Refer to [GI-37, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS

### FRONT WIPER AND WASHER SYSTEM

#### System Diagram

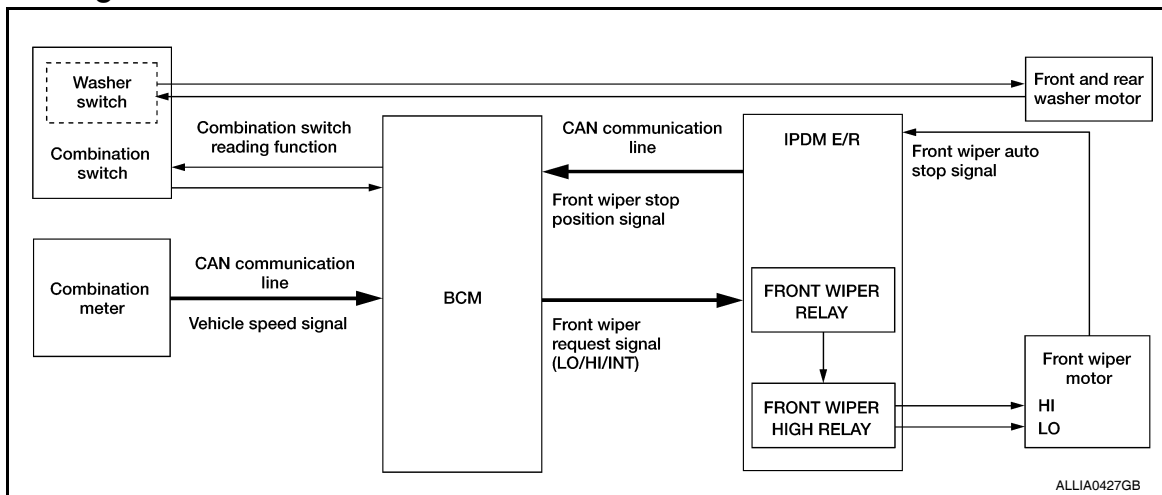

#### System Description

INFOID:000000003084532

#### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

##### Control by BCM

- Combination switch reading function
- Front wiper control function

##### Control by IPDM E/R

- Front wiper control function
- Relay control function

#### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

#### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

##### Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

#### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

##### Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

#### FRONT WIPER INT OPERATION (LINKED WITH VEHICLE SPEED)

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication according to the front wiper INT operation condition and the intermittent operation delay interval judged value.

Front wiper INT operating condition


- Ignition switch ON
- Front wiper switch INT

Intermittent operation delay interval judgment

- BCM calculates the intermittent operation delay interval from the vehicle speed signal received from the wiper dial position and the combination meter with CAN communication.

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval (s)			
		Vehicle speed			
		Vehicle stopped or less than 5 km/h (3.1 MPH)	5 km/h (3.1 MPH) or more or less than 35 km/h (21.7 MPH)	35 km/h (21.7 MPH) or more or less than 65 km/h (40.4 MPH)	65 km/h (40.4 MPH) or more
1	Short ↑	0.8	0.6	0.4	0.24
2		4	3	2	1.2
3		10	7.5	5	3
4		16	12	8	4.8
5		24	18	12	7.2
6	Long ↓	32	24	16	9.6
7		42	31.5	21	12.6

- IPDM E/R turns the integrated front wiper relay ON so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval after the front wiper motor is stopped.

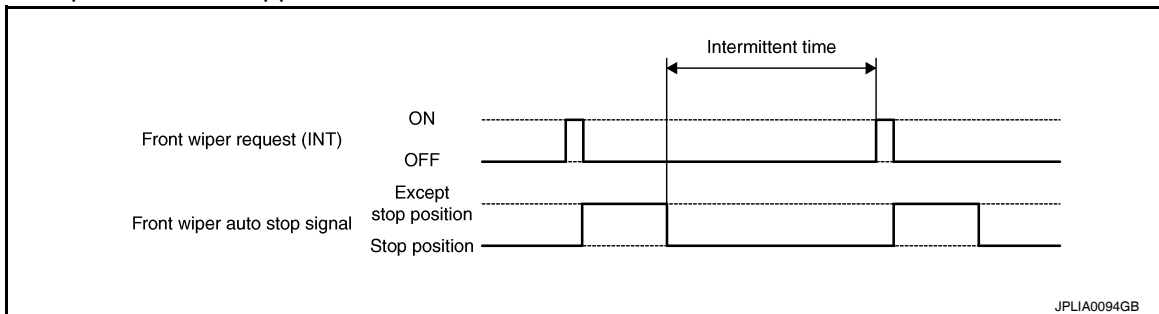


## FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper auto stop signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

# FRONT WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

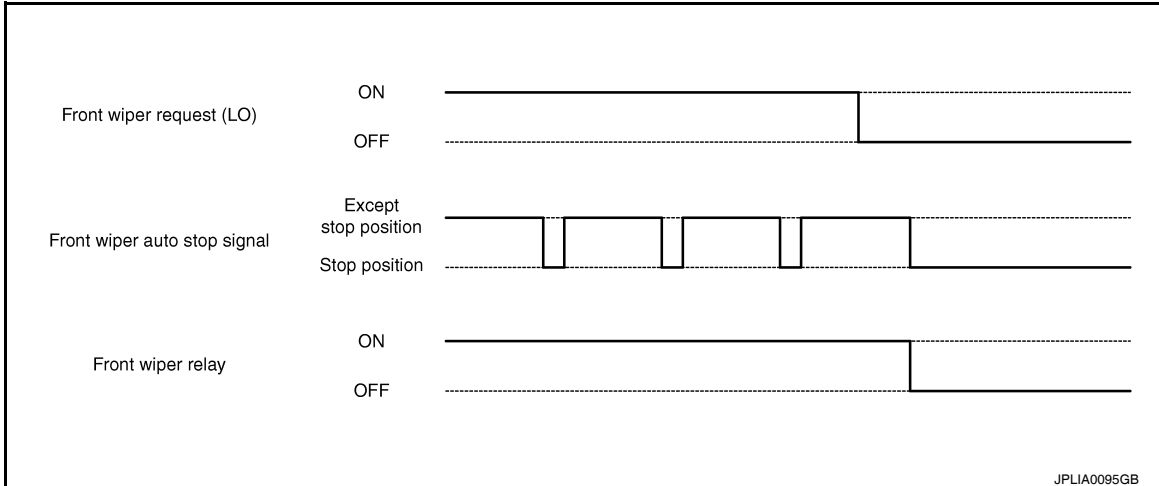

### NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

### FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 3 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The front and rear washer motor is grounded through the combination switch with the front washer switch ON.

### FRONT WIPER DROP WIPE OPERATION

- BCM controls the front wiper to operate once according to the conditions of front wiper drop wipe operation.

Front wiper drop wipe operating condition

- Ignition switch ON
- Front wiper switch OFF
- Front washer switch OFF
- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication so that the front wiper operate once three seconds after front wiper operation linked with washer.
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

### FRONT WIPER FAIL-SAFE OPERATION


- IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [WW-64. "Fail Safe"](#).

# FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003084533

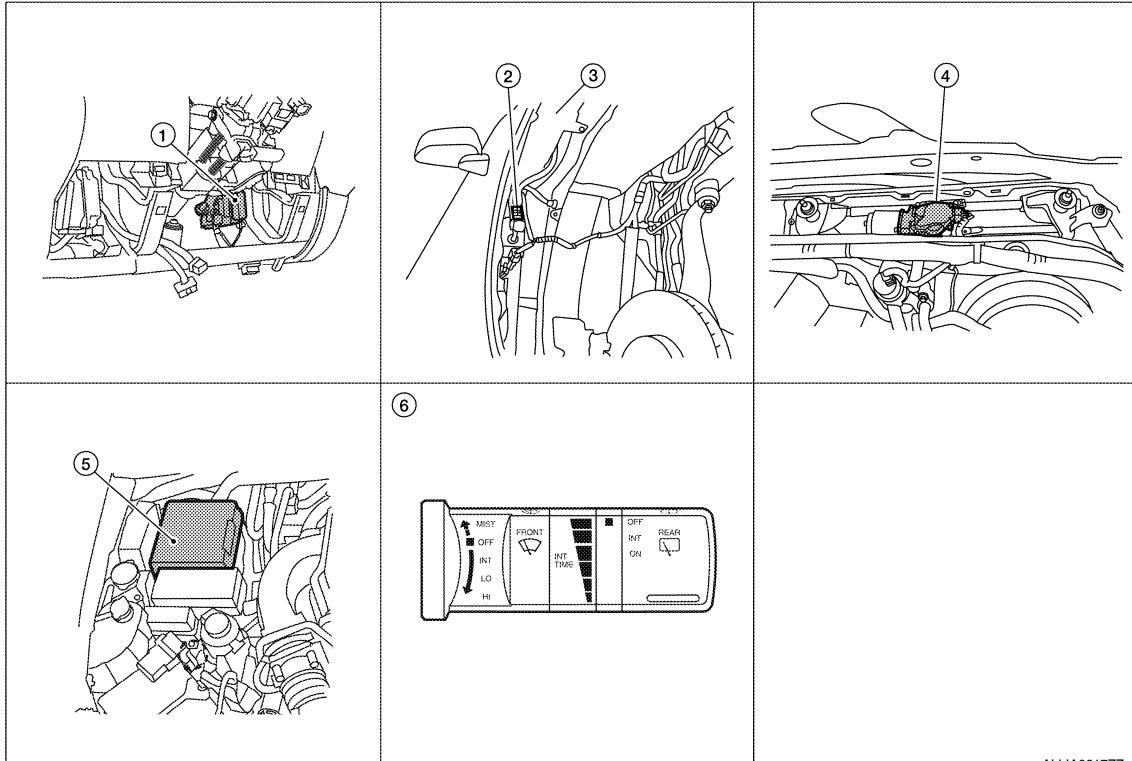

1. BCM M18, M20 (view with instrument lower panel LH removed)
2. Front and rear washer motor E105
3. Washer fluid reservoir
4. Front wiper motor E23 (view with cowl top removed)
5. IPDM E/R E121, E122, E124
6. Combination switch M28

ALLIA0617ZZ

## Component Description

INFOID:000000003084534

Part	Description
BCM	<ul style="list-style-type: none"> <li>Judges each switch status by the combination switch reading function.</li> <li>Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.</li> </ul>
IPDM E/R	<ul style="list-style-type: none"> <li>Controls the integrated relay according to the request (with CAN communication) from BCM.</li> <li>Performs the auto stop control of the front wiper.</li> </ul>
Combination switch (Wiper and washer switch)	Refer to <a href="#">WW-4. "System Diagram"</a> .
Combination meter	Transmits the vehicle speed signal to BCM with CAN communication.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW


M  
N  
O  
P

# REAR WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## REAR WIPER AND WASHER SYSTEM

### System Diagram

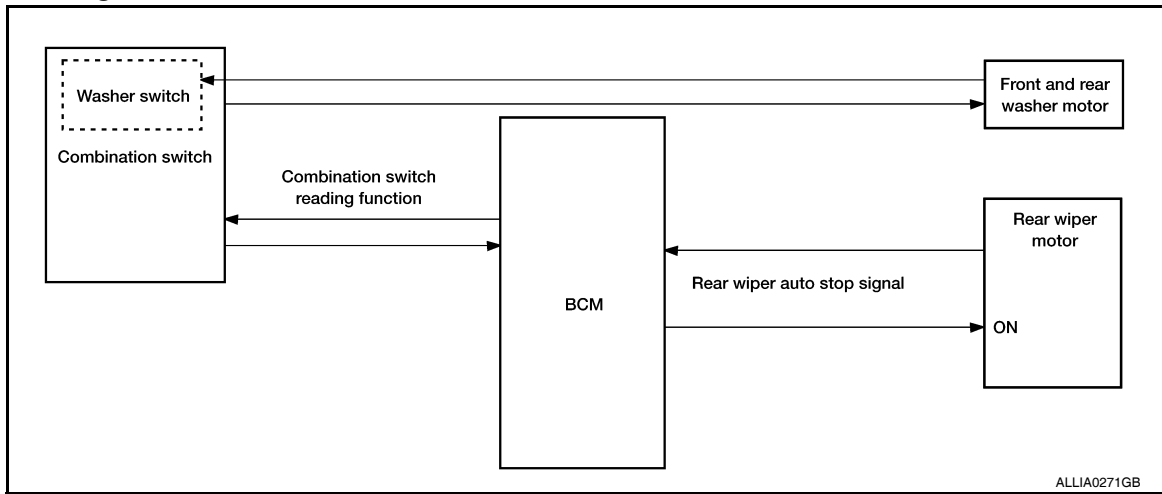

### System Description

INFOID:000000003084536

#### OUTLINE

The rear wiper is controlled by each function of BCM.

Control by BCM

- Combination switch reading function
- Rear wiper control function

#### REAR WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM controls the rear wiper to start or stop.

#### REAR WIPER ON OPERATION

- BCM supplies power to the rear wiper motor according to the rear wiper ON operating condition.

Rear wiper ON operating condition


- Ignition switch ON
- Rear wiper switch ON

#### REAR WIPER INT OPERATION

- BCM supplies power to the rear wiper motor according to the INT operating condition.

Rear wiper INT operating condition

- Ignition switch ON
- Rear wiper switch INT
- BCM controls the rear wiper to operate once.
- BCM detects the rear wiper motor stopping position.
- BCM supplies power to the rear wiper motor after an intermittent from the stop of the rear wiper motor.

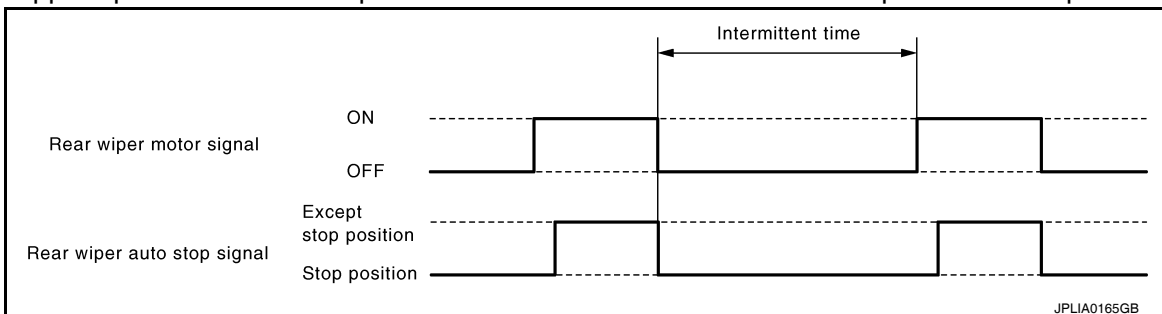

#### REAR WIPER AUTO STOP OPERATION


- BCM stops supplying power to the rear wiper motor when the rear wiper switch is turned OFF.



# REAR WIPER AND WASHER SYSTEM

## < FUNCTION DIAGNOSIS >

- BCM reads an auto stop signal from the rear wiper motor to detect a rear wiper motor position.
- When the rear wiper motor is at other than the stopping position, BCM continues to supply power to the rear wiper motor until it returns to the stopping position.

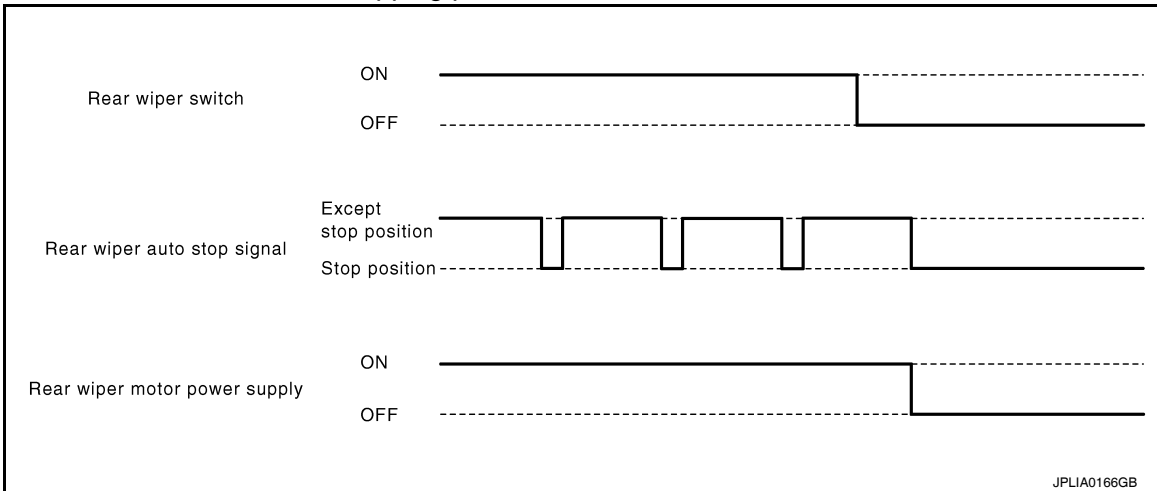

### NOTE:

BCM stops supplying power to the rear wiper motor when the ignition switch is turned OFF.

### REAR WIPER OPERATION LINKED WITH WASHER

- BCM supplies power to the rear wiper motor according to the washer linked operating condition of rear wiper. When the rear washer switch is turned OFF, BCM controls rear wiper to operate approximately three times.

Washer linked operating condition of rear wiper

- Ignition switch ON
- Rear washer switch ON (0.4 second or more)
- Front and rear washer motor becomes grounded through the combination switch when the rear washer switch is turned ON.

### REAR WIPER DROP WIPE OPERATION

- BCM controls the rear wiper to operate once according to the rear wiper drop wipe operating condition.

Rear wiper drop wipe operating condition

- Ignition switch ON
- Rear wiper switch OFF
- Rear washer switch OFF
- BCM controls the rear wiper so that it operates once time approximately three seconds later after the washer interlocking operation of the rear wiper.

### REAR WIPER FAIL-SAFE OPERATION


BCM performs the fail-safe function when the rear wiper auto stop circuit is malfunctioning. Refer to [WW-52](#). "Fail Safe".

# REAR WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000003084537

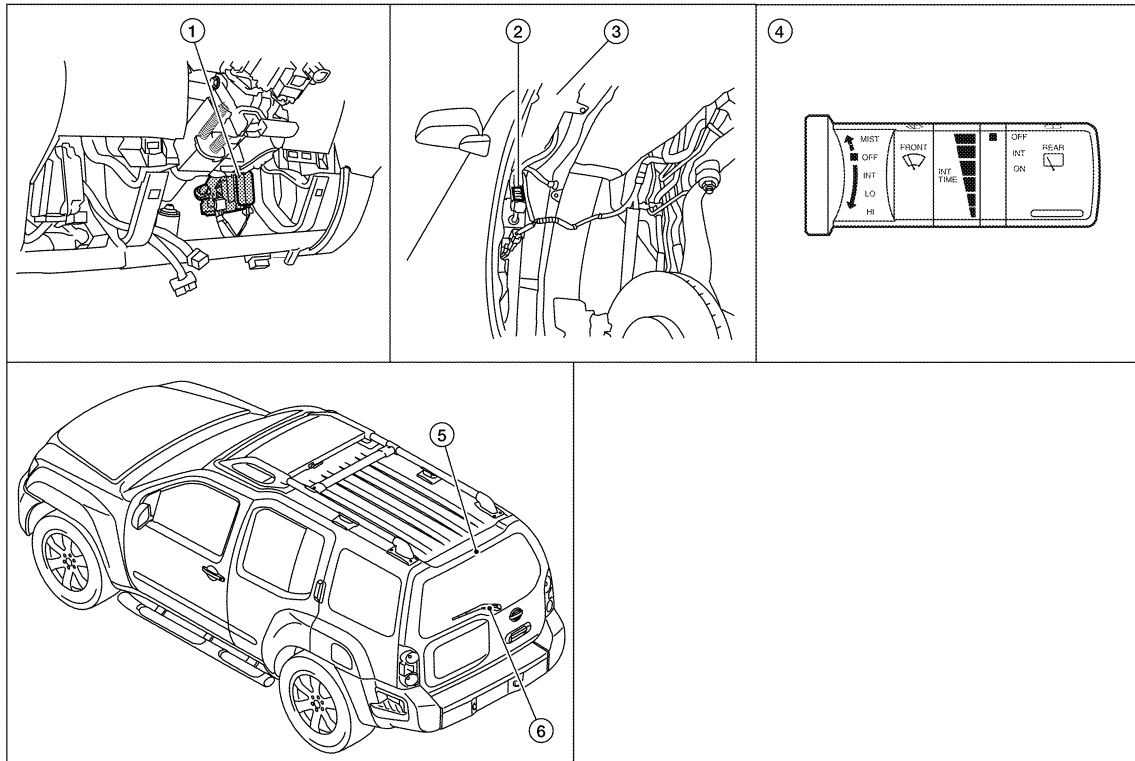

ALLIA0829ZZ

- |  |   |                           |
|--|---|---------------------------|
| 1. BCM M18, M19, M20 (view with instrument lower panel LH removed) | 2. Front and rear washer motor connector E105 | 3. Washer fluid reservoir |
| 4. Combination switch M28  | 5. Rear washer nozzle                         | 6. Rear wiper motor D509  |

## Component Description

INFOID:000000003084538

Part	Description
BCM	<ul style="list-style-type: none"> <li>Judges each switch status by the combination switch reading function.</li> <li>Supplies power to the rear wiper motor.</li> <li>Performs the auto stop control of the rear wiper.</li> </ul>
Combination switch (Wiper and washer switch)	Refer to <a href="#">WW-4. "System Diagram"</a> .

# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004992444

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to <a href="#">BCS-49, "DTC Index"</a> .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"> <li>Enables to read and save the vehicle specification.</li> <li>Enables to write the vehicle specification when replacing BCM.</li> </ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	PANIC ALARM			×

### WIPER

#### WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:000000004992445

#### WORK SUPPORT

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

Work Item	Setting Item	Description
WIPER SPEED SETTING	ON*	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	OFF	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

\*: Factory setting

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Ignition switch ON status judged from ignition power supply
FR WIPER HI [ON/OFF]	Each switch status that BCM judges from the combination switch reading function
FR WIPER LOW [ON/OFF]	
FR WIPER INT [ON/OFF]	
FR WASHER SW [ON/OFF]	
INT VOLUME [1 - 7]	Each switch status that BCM judges from the combination switch reading function
FR WIPER STOP [ON/OFF]	Front wiper motor (stop position) status received from IPDM E/R with CAN communication
VEHICLE SPEED [km/h]	The value of the vehicle speed signal received from combination meter with CAN communication
RR WIPER ON [ON/OFF]	Each switch status that BCM judges from the combination switch reading function
RR WIPER INT [ON/OFF]	
RR WASHER SW [ON/OFF]	
RR WIPER STOP [ON/OFF]	Rear wiper motor (stop position) status input from the rear wiper motor

## ACTIVE TEST

Test Item	Operation	Description
FR WIPER	HI	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	LO	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	OFF	Stops transmitting the front wiper request signal to stop the front wiper operation.
RISE UP WIPER TEST	ON	Outputs the voltage to operate the rear wiper motor.
	OFF	Stops the voltage to stop.

# DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000004992446

### AUTO ACTIVE TEST

#### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low warning indicator
- Oil pressure gauge
- Rear window defogger
- Front wipers
- Tail, license and parking lamps
- Front fog lamps (if equipped)
- Headlamps (Hi, Lo)
- A/C compressor (magnetic clutch)
- Cooling fan

#### Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).  
**NOTE:**  
When auto active test is performed with hood opened, sprinkle water on windshield before hand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

#### **NOTE:**


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

#### **CAUTION:**

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-19, "Description"](#).**
- **Do not start the engine.**

#### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 7 steps are repeated 3 times.

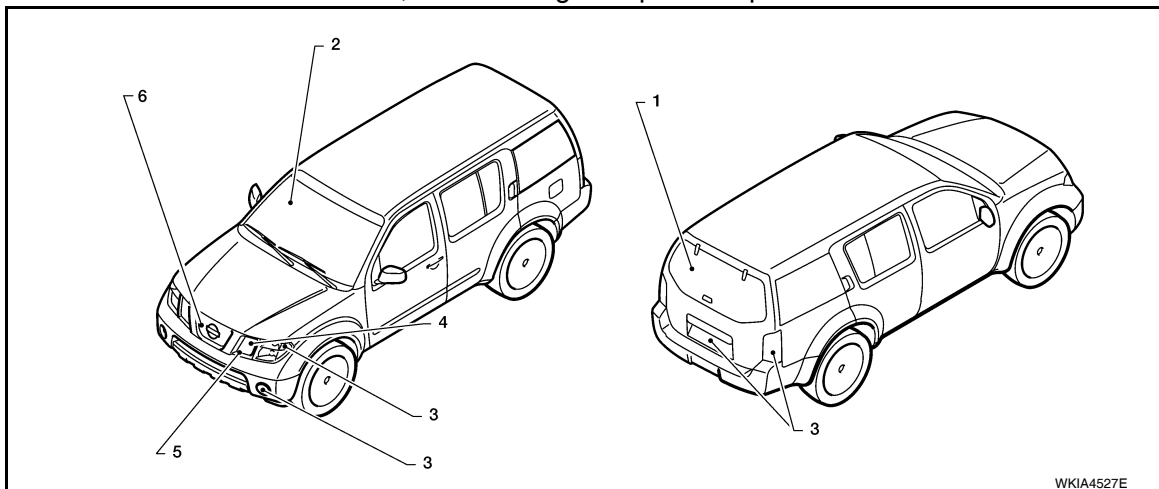

Item Number	Test Item	Operation Time/Frequency
1	Rear window defogger	10 seconds
2	Front wipers	LOW 5 seconds then HIGH 5 seconds
3	License plate, tail, parking and fog lamps (if equipped)	10 seconds

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P


WW

# DIAGNOSIS SYSTEM (IPDM E/R)

## < FUNCTION DIAGNOSIS >

Item Number	Test Item	Operation Time/Frequency
4	Headlamps	LOW 10 seconds then HIGH ON-OFF 5 times
5	A/C compressor (magnet clutch)	ON-OFF 5 times
6	Cooling fan	LOW 5 seconds, then HIGH 5 seconds

### Concept of auto active test

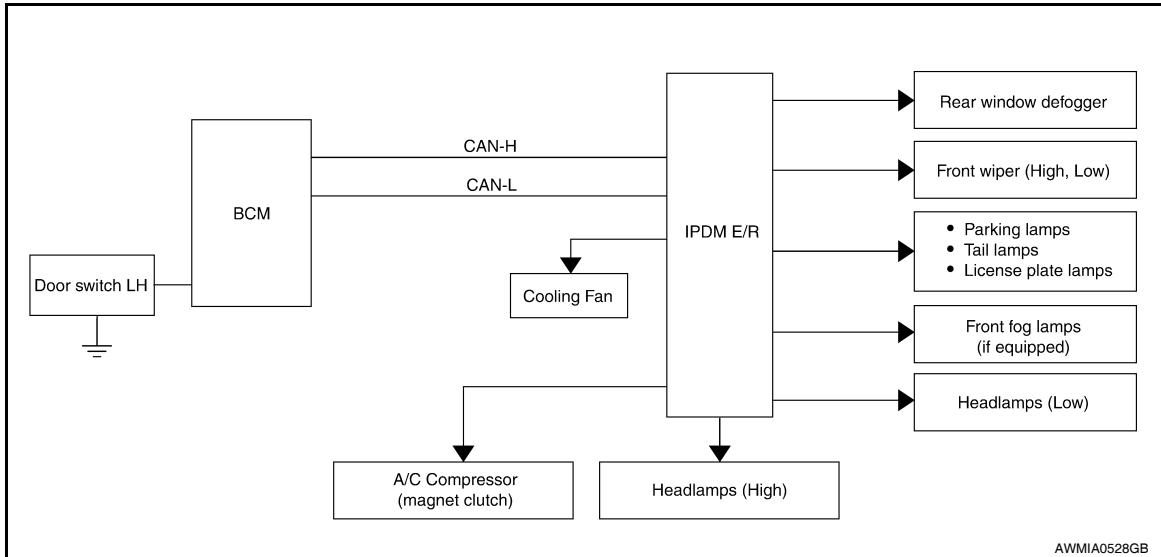

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Oil pressure low warning indicator does not operate	Perform auto active test. Does the oil pressure low warning indicator operate?	YES • IPDM E/R signal input circuit • ECM signal input circuit • CAN communication signal between ECM and combination meter
		NO • CAN communication signal between IPDM E/R, BCM and combination meter
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES IPDM E/R signal input circuit
		NO • CAN communication signal between IPDM E/R, BCM and combination meter
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO • Harness or connector between A/C and AV switch assembly and AV control unit • CAN communication signal between BCM and IPDM E/R

# DIAGNOSIS SYSTEM (IPDM E/R)

## < FUNCTION DIAGNOSIS >

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Front wipers</li> <li>• Tail lamps</li> <li>• License plate lamps</li> <li>• Parking lamps</li> <li>• Front fog lamps (if equipped)</li> <li>• Headlamps (Hi, Lo)</li> </ul>	Perform auto active test. Does the applicable system operate?	YES BCM signal input system
		NO <ul style="list-style-type: none"> <li>• Lamp or front wiper motor malfunction</li> <li>• Lamp or front wiper motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES <ul style="list-style-type: none"> <li>• BCM signal input circuit</li> <li>• CAN communication signal between BCM and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Magnetic clutch malfunction</li> <li>• Harness or connector between IPDM E/R and magnetic clutch</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Cooling fan motor malfunction</li> <li>• Harness or connector between IPDM E/R and cooling fan</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>

## CONSULT - III Function (IPDM E/R)

INFOID:000000004992447

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
ECU Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

### SELF DIAGNOSTIC

Refer to [PCS-31, "DTC Index"](#).

### DATA MONITOR

Monitor item

## DIAGNOSIS SYSTEM (IPDM E/R)

### < FUNCTION DIAGNOSIS >

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the status of the cooling fan speed request signal received from ECM via CAN communication.
A/C COMP REQ [OFF/ON]	×	Displays the status of the A/C request signal received from BCM via CAN communication.
TAIL&CLR REQ [OFF/ON]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [OFF/ON]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [OFF/ON]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [OFF/ON]	×	Displays the status of the front fog lamp request signal received from BCM via CAN communication.
HL WASHER REQ [OFF/ON]		<b>NOTE:</b> This item is displayed, but cannot be monitored.
FR WIP REQ [STOP/1LOW/LOW/HI]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [OFF/Block]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
ST RLY REQ [OFF/ON]		Displays the status of the starter request signal received from ECM via CAN communication.
IGN RLY [OFF/ON]	×	Displays the status of the ignition relay judged by IPDM E/R.
RR DEF REQ [OFF/ON]	×	Displays the status of the rear defogger request signal received from AV control unit via CAN communication.
OIL P SW [OPEN/CLOSE]		Displays the status of the oil pressure switch judged by IPDM E/R.
DTRL REQ [OFF]		<b>NOTE:</b> This item is displayed, but cannot be monitored.
HOOD SW [OPEN/CLOSE]		<b>NOTE:</b> This item is displayed, but cannot be monitored.
THFT HRN REQ [OFF/ON]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [OFF/ON]		Displays the status of the horn reminder signal received from BCM via CAN communication.

### ACTIVE TEST

#### Test item

Test item	Operation	Description
REAR DEFOGGER	OFF	OFF
	ON	Operates rear window defogger relay.
FRONT WIPER	OFF	OFF
	LO	Operates the front wiper relay.
	HI	Operates the front wiper relay and front wiper high relay.
HEAD LAMP WASHER	ON	—



## DIAGNOSIS SYSTEM (IPDM E/R)

### < FUNCTION DIAGNOSIS >

Test item	Operation	Description	
MOTOR FAN	1	OFF	A
	2	OFF	
	3	Operates the cooling fan relay.	B
	4	Operates the cooling fan relay.	
EXTERNAL LAMPS	OFF	OFF	C
	TAIL	Operates the tail lamp relay.	
	LO	Operates the headlamp low relay.	D
	HI	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.	
	FOG	Operates the front fog lamp relay	E
HORN	ON	Operates horn relay for 20 ms.	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

**WW**

# WIPER AND WASHER FUSE

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### WIPER AND WASHER FUSE

#### Description

INFOID:000000003084543

#### Fuse list

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	39	30 A
Front and rear washer motor	Fuse block (J/B)	15	10 A

#### Diagnosis Procedure

INFOID:000000003084544

#### 1. CHECK FUSES

Check that the following fuses are not blown.

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	39	30 A
Front and rear washer motor	Fuse block (J/B)	15	10 A

#### Is the fuse blown?

- YES >> Replace the fuse after repairing the applicable circuit.
- NO >> The fuse is normal.

# FRONT WIPER MOTOR LO CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR LO CIRCUIT

### Component Function Check

INFOID:000000003084545

#### 1. CHECK FRONT WIPER LO OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-13, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. While operating the test item, check front wiper operation.

**LO** : Front wiper (LO) operation

**OFF** : Stop the front wiper.

Is front wiper (LO) operation normal?

- YES >> Front wiper motor LO circuit is normal.  
 NO >> Refer to [WW-19, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003084546

#### 1. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	39	30 A

Is the fuse blown?

- YES >> GO TO 2  
 NO >> GO TO 3


#### 2. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

1. Disconnect IPDM E/R and front wiper motor.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E121	32		No

Does continuity exist?

- YES >> Repair or replace harness.  
 NO >> Replace the fuse. (Replace IPDM E/R if the fuse is blown again.)

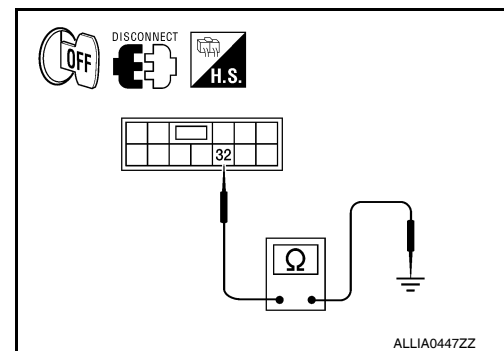

#### 3. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

##### Ⓜ CONSULT-III ACTIVE TEST

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# FRONT WIPER MOTOR LO CIRCUIT

## < COMPONENT DIAGNOSIS >

1. Turn the ignition switch ON.
2. Select "FRONT WIPER" of IPDM E/R active test item.
3. While operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E121	32	LO	Battery voltage
		OFF	0V

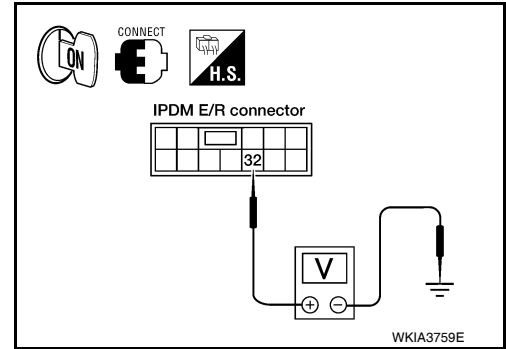

Is the measurement value normal?

- YES >> GO TO 4  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation of IPDM E/R"](#).


## 4. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	32	E23	1	Yes

Does continuity exist?

- YES >> Replace front wiper motor. Refer to [WW-74, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

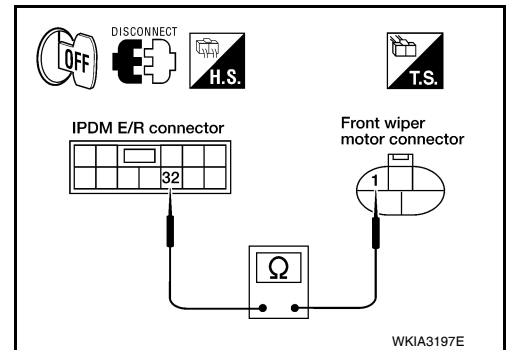

# FRONT WIPER MOTOR HI CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR HI CIRCUIT

### Component Function Check

INFOID:000000003084547

#### 1. CHECK FRONT WIPER HI OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-13, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. While operating the test item, check front wiper operation.

**HI** : Front wiper (HI) operation

**OFF** : Stop the front wiper.

Is front wiper (HI) operation normal?

- YES >> Front wiper motor HI circuit is normal.  
NO >> Refer to [WW-21, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003084548

#### 1. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	39	30 A

Is the fuse blown?

- YES >> GO TO 2  
NO >> GO TO 3

#### 2. CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R and front wiper motor.
2. Check continuity between IPDM E/R harness connector and ground.


IPDM E/R		Ground	Continuity
Connector	Terminal		
E121	35		No

Does continuity exist?

- YES >> Repair or replace harness.  
NO >> Replace the fuse. (Replace IPDM E/R if the fuse is blown again.)

#### 3. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

##### Ⓜ CONSULT-III ACTIVE TEST

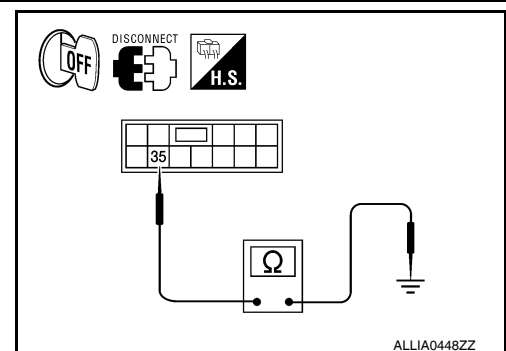

# FRONT WIPER MOTOR HI CIRCUIT

## < COMPONENT DIAGNOSIS >

1. Turn the ignition switch ON.
2. Select "FRONT WIPER" of IPDM E/R active test item.
3. While operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E121	35	HI	Battery voltage
		OFF	0 V



Is the measurement value normal?

- YES >> GO TO 4  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation of IPDM E/R"](#).


## 4. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	35	E23	4	Yes

Does continuity exist?

- YES >> Replace front wiper motor. Refer to [WW-74, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

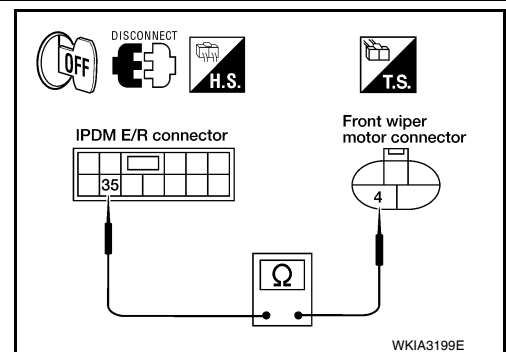

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000003084549

#### 1. CHECK FRONT WIPER (AUTO STOP) SIGNAL CHECK

##### CONSULT-III DATA MONITOR

1. Select "FR WIPER STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. Check that "FR WIPER STOP" changes to "ON" and "OFF" linked with the wiper operation.

Monitor item	Condition		Monitor status
FR WIPER STOP	Front wiper motor	Stop position	ON
		Except stop position	OFF

Is the status of item normal?

- YES >> Front wiper auto stop signal circuit is normal.  
 NO >> Refer to [WW-23, "Diagnosis Procedure"](#).


### Diagnosis Procedure

INFOID:000000003084550

#### 1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch ON.
2. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E122	43	
		Battery voltage

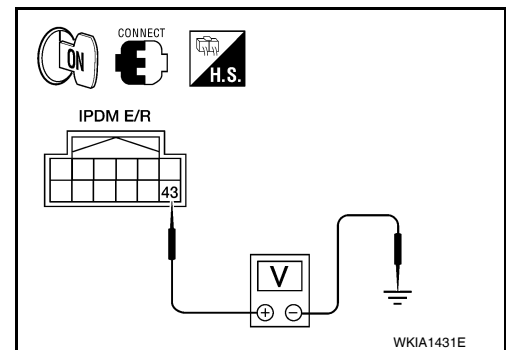


Is the measurement value normal?

- YES >> GO TO 3  
 NO >> GO TO 2

#### 2. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122	43		No

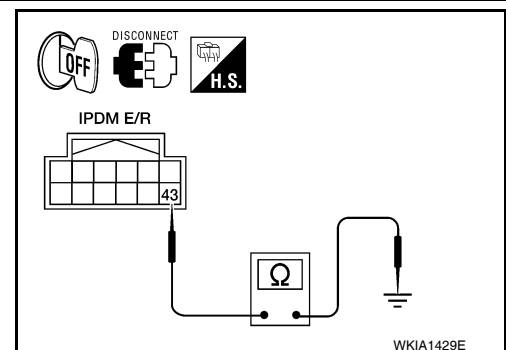

Does continuity exist?

- YES >> Repair or replace harness.  
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation of IPDM E/R"](#).

#### 3. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT


### < COMPONENT DIAGNOSIS >

Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E122	43	E23	5	Yes

#### Does continuity exist?

- YES >> Replace front wiper motor. Refer to [WW-74, "Removal and Installation"](#).
- NO >> Repair or replace harness.

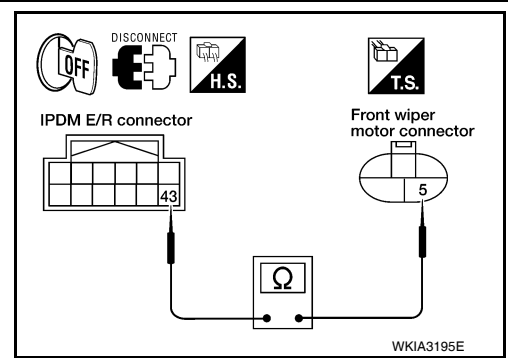



# FRONT WIPER MOTOR GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT WIPER MOTOR GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000003084551


#### 1. CHECK FRONT WIPER MOTOR (GROUND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		
E23	2		Yes

#### Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.  
NO >> Repair or replace harness.

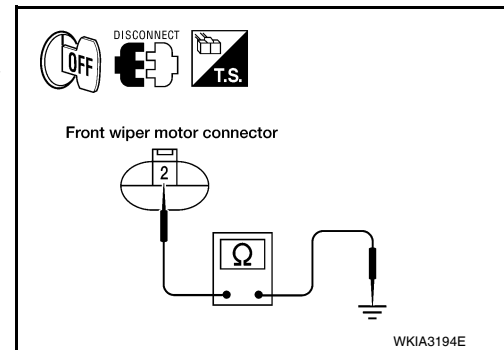

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WASHER SWITCH


< COMPONENT DIAGNOSIS >

## WASHER SWITCH

### Description

INFOID:000000003084552

- Washer switch is integrated with combination switch.
- Combination switch switches polarity between front washer operating and rear washer operating to supply power to the front and rear washer motor on ground.

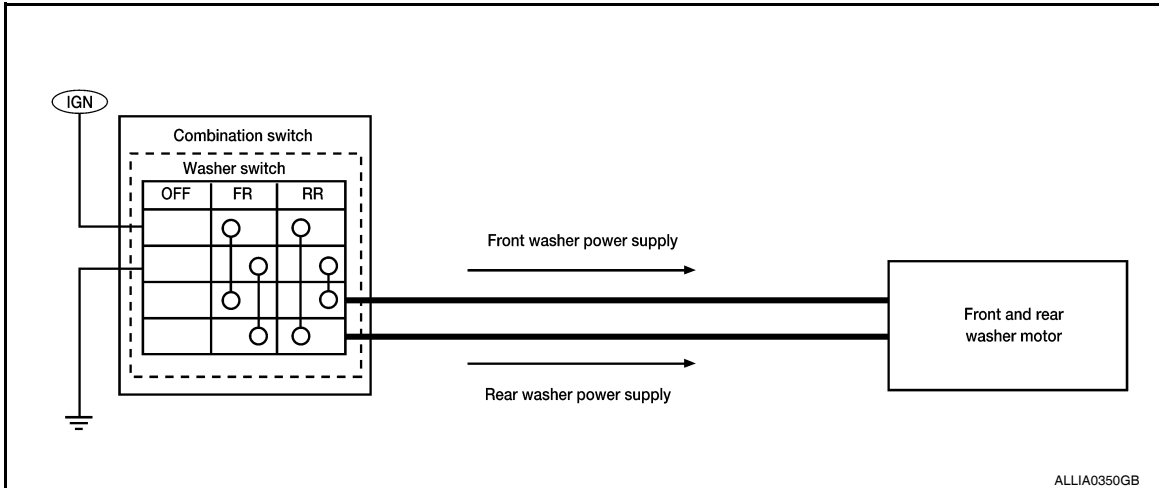

### Component Inspection

INFOID:000000003084553

#### 1. CHECK FRONT WASHER SWITCH


1. Turn the ignition switch OFF.
2. Disconnect combination switch.
3. Check continuity between the combination switch terminals.

A: Terminal 14


B: Terminal 12

C: Terminal 13

D: Terminal 11

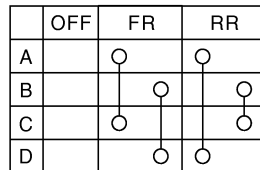

JPLIA0164GB

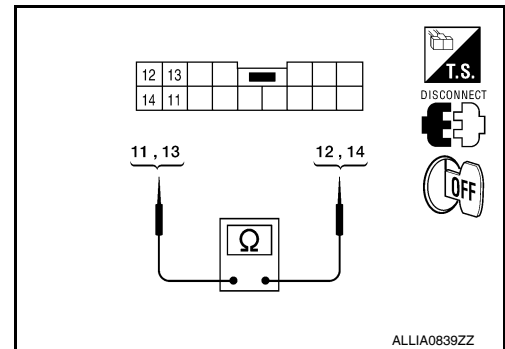

Combination switch		Condition	Continuity
Terminal			
11	12	Front washer switch ON	Yes
13	14		

Does continuity exist?

YES >> GO TO 2.

NO >> Replace combination switch. Refer to [WW-74, "Removal and Installation"](#).

#### 2. CHECK REAR WASHER SWITCH

# WASHER SWITCH

## < COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect combination switch.
3. Check continuity between the combination switch terminals.

A: Terminal 14


B: Terminal 12

C: Terminal 13

D: Terminal 11

	OFF	FR	RR
A		○	○
B		○	○
C		○	○
D		○	○

JPLIA0164GB

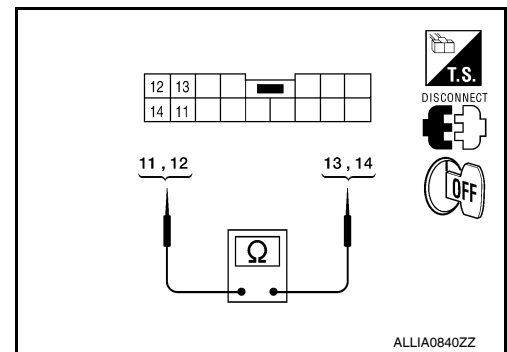

Combination switch		Condition	Continuity
Terminal			
11	14	Rear washer switch ON	Yes
12	13		

### Does continuity exist?

YES >> Wiper and washer switch is normal.

NO >> Replace combination switch. Refer to [WW-74, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# REAR WIPER MOTOR CIRCUIT

< COMPONENT DIAGNOSIS >

## REAR WIPER MOTOR CIRCUIT

### Component Function Check

INFOID:000000003084554

#### 1. CHECK REAR WIPER ON OPERATION

##### CONSULT-III ACTIVE TEST

1. Select "RR WIPER" of BCM active test item.
2. While operating the test item, check rear wiper operation.

**ON** : Rear wiper ON operation

**OFF** : Stop the rear wiper.

##### Is rear wiper operation normal?

- YES >> Rear wiper motor circuit is normal.  
 NO >> Refer to [WW-28, "Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000003084555

#### 1. CHECK REAR WIPER MOTOR OUTPUT VOLTAGE

##### CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect rear wiper motor.
3. Turn the ignition switch ON.
4. Select "RR WIPER" of BCM active test item.
5. While operating the test item, check voltage between BCM harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		REAR WIPER	Battery voltage
Connector	Terminal		
M19	55	ON	Battery voltage
		OFF	0V

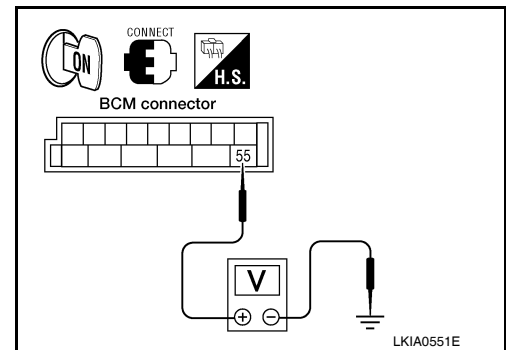

##### Is the measurement value normal?

- YES >> GO TO 2  
 NO >> GO TO 3


#### 2. CHECK REAR WIPER MOTOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between rear wiper motor harness connector and ground.

Rear wiper motor		Ground	Continuity
Connector	Terminal		
D509	1		Yes

##### Does continuity exist?

- YES >> Replace rear wiper motor. Refer to [WW-80, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

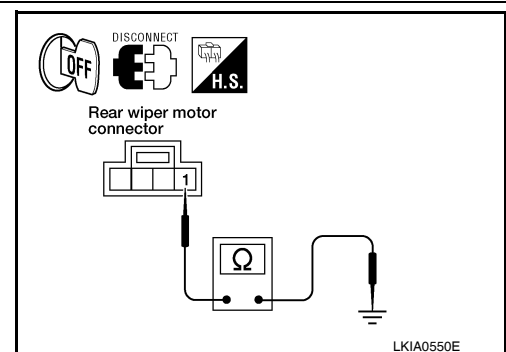

#### 3. CHECK REAR WIPER MOTOR OPEN CIRCUIT

# REAR WIPER MOTOR CIRCUIT


## < COMPONENT DIAGNOSIS >

1. Check continuity between BCM harness connector and rear wiper motor harness connector.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
M19	55	D509	4	Yes

### Does continuity exist?

- YES >> GO TO 4  
 NO >> Repair or replace harness.

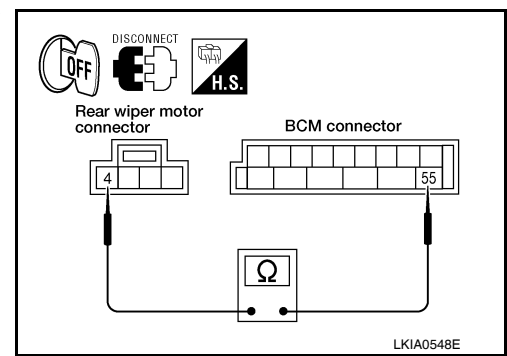


## 4. CHECK REAR WIPER MOTOR SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55		No

### Does continuity exist?

- YES >> Repair or replace harness.  
 NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

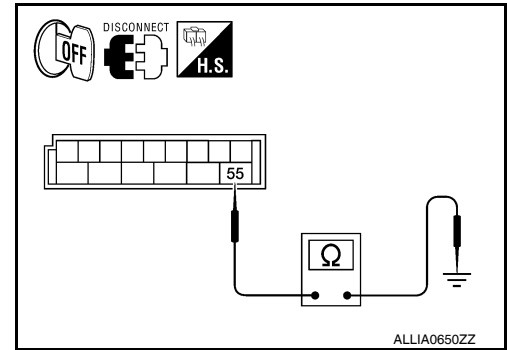

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

# REAR WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## REAR WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000003084556

#### 1. CHECK REAR WIPER (AUTO STOP) OPERATION

##### CONSULT-III DATA MONITOR

1. Select "WIPER" of BCM data monitor item.
2. Operate the rear wiper.
3. Check that "RR WIPER STOP" changes to "ON" and "OFF" linked with the wiper operation.

Monitor item	Condition	Monitor status
RR WIPER STOP	Rear wiper motor	Stop position
		Except stop position
		ON
		OFF

Is the status of item normal?

- YES >> Rear wiper auto stop signal circuit is normal.  
 NO >> Refer to [WW-30, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003084557


#### 1. CHECK REAR WIPER MOTOR AUTO STOP CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect BCM and rear wiper motor.
3. Check continuity between BCM harness connector terminals and rear wiper motor harness connector terminals.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
M19	44	D509	2	Yes

Is inspection result normal?

- YES >> GO TO 2  
 NO >> Repair or replace harness.

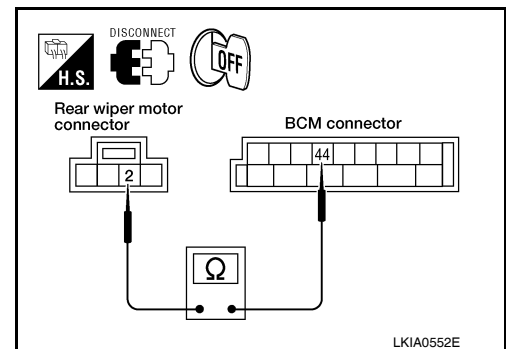


#### 2. CHECK AUTO STOP CIRCUITS FOR SHORT TO GROUND

Check continuity between BCM harness connector terminals and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	44		No

Is inspection result normal?

- YES >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

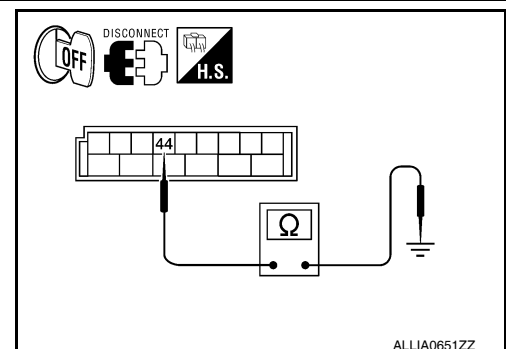


# FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

## FRONT WIPER AND WASHER SYSTEM

### Wiring Diagram

INFOID:000000003084558

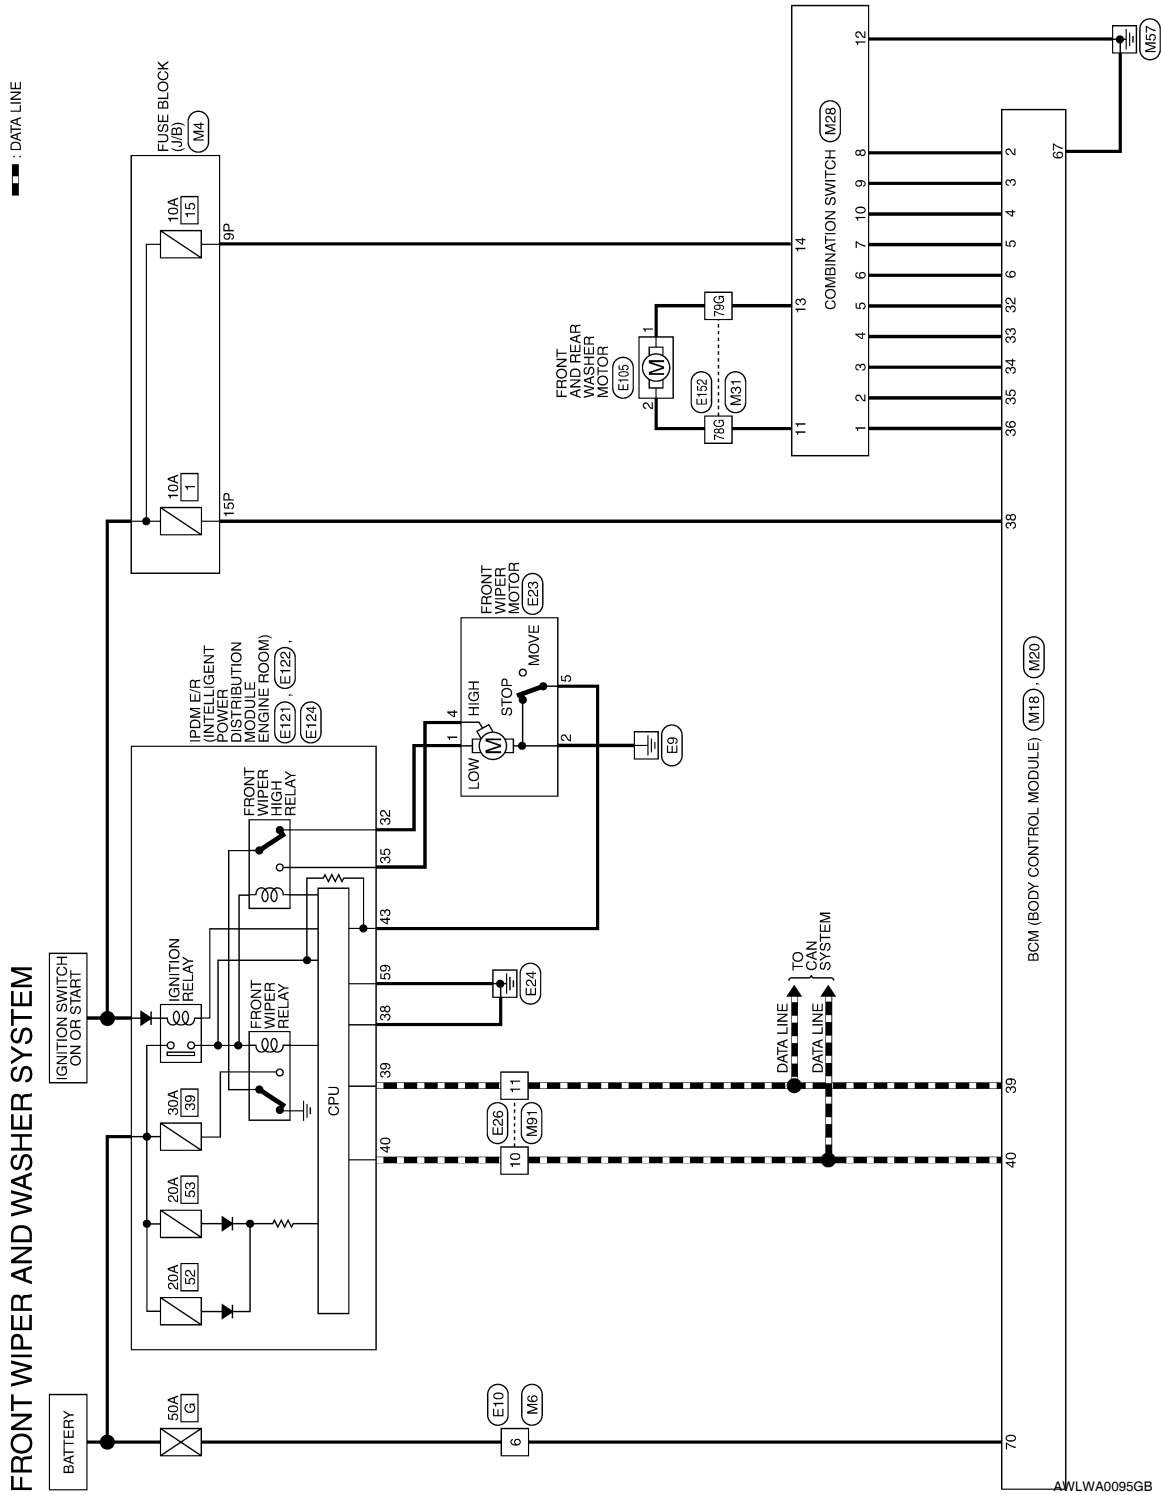

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P


WW

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

### FRONT WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

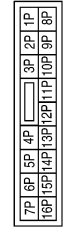


Terminal No.	Color of Wire	Signal Name
9P	W/G	-
15P	W/R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-


Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

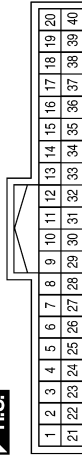

Terminal No.	Color of Wire	Signal Name
2	P	COMBI SW INPUT5
3	SB	COMBI SW INPUT4

Terminal No.	Color of Wire	Signal Name
4	V	COMBI SW INPUT3
5	L	COMBI SW INPUT2
6	R	COMBI SW INPUT1
32	O	COMBI SW OUTPUT5
33	GR	COMBI SW OUTPUT4
34	G	COMBI SW OUTPUT3
35	BR	COMBI SW OUTPUT2
36	LG	COMBI SW OUTPUT1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

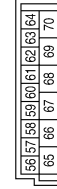

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)




# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
4	GR	INPUT 4
5	O	INPUT 5
6	R	OUT PUT 1
7	L	OUT PUT 2
8	P	OUT PUT 5
9	SB	OUT PUT 4
10	V	OUT PUT 3
11	O	WASHER MOTOR (FR-)
12	B	GND
13	L	WASHER MOTOR (FR+)
14	W	IGN


Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

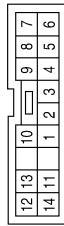


Terminal No.	Color of Wire	Signal Name
1	LG	INPUT 1
2	BR	INPUT 2
3	G	INPUT 3

Terminal No.	Color of Wire	Signal Name
78G	O	-
79G	L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

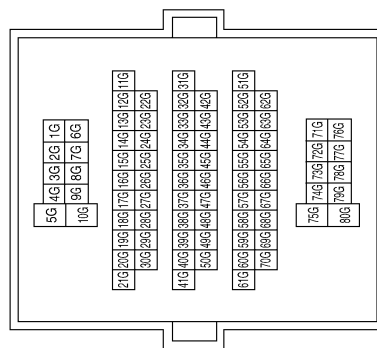

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

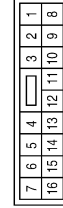

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

AWLIA0332GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

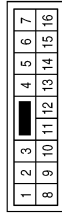

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E23
Connector Name	FRONT WIPER MOTOR
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	GR	-
2	B	-
3	-	-
4	L	-
5	G	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

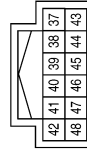

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
43	G	AUTO_STOP_SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
32	GR	FR_WIPER_LO
35	L	FR_WIPER_HI

Connector No.	E105
Connector Name	FRONT AND REAR WASHER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	O	-


AWLIA0333GB

# FRONT WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
78G	O	-
79G	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

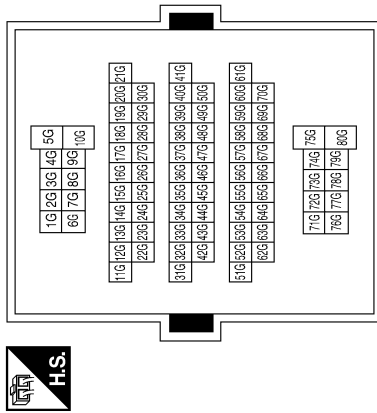

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

AWLIA0334GB



# REAR WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

## REAR WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9P	W/G	-
15P	W/R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

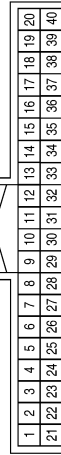

Terminal No.	Color of Wire	Signal Name
2	P	COMBI SW INPUT 5
3	SB	COMBI SW INPUT 4
4	V	COMBI SW INPUT 3
5	L	COMBI SW INPUT 2
6	R	COMBI SW INPUT 1
32	O	COMBI SW OUTPUT 5
33	GR	COMBI SW OUTPUT 4
34	G	COMBI SW OUTPUT 3
35	BR	COMBI SW OUTPUT 2
36	LG	COMBI SW OUTPUT 1
38	W/R	IGN SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

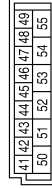

Terminal No.	Color of Wire	Signal Name
44	O	AUTO-STOP
55	W	RR WIPER O/P (MTR)

AWLIA0335GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# REAR WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >


Terminal No.	Color of Wire	Signal Name
4	GR	INPUT 4
5	O	INPUT 5
6	R	OUT PUT 1
7	L	OUT PUT 2
8	P	OUT PUT 5
9	SB	OUT PUT 4
10	V	OUT PUT 3
11	O	WASHER MOTOR (FR-)
12	B	GND
13	L	WASHER MOTOR (FR+)
14	W	IGN

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

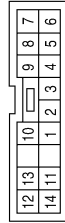


Terminal No.	Color of Wire	Signal Name
1	LG	INPUT 1
2	BR	INPUT 2
3	G	INPUT 3

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

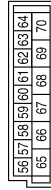


Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

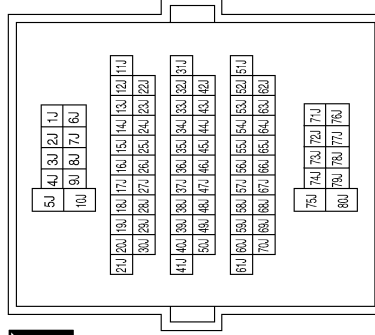

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

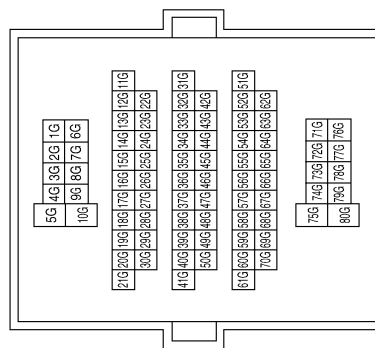

Terminal No.	Color of Wire	Signal Name
73J	O	-
74J	W	-

Terminal No.	Color of Wire	Signal Name
78G	O	-
79G	L	-

AWLIA0336GB

# REAR WIPER AND WASHER SYSTEM

## < COMPONENT DIAGNOSIS >

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	E105
Connector Name	FRONT AND REAR WASHER MOTOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	O	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

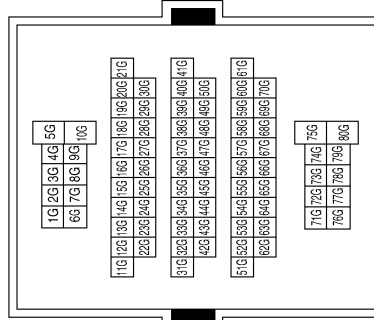


Terminal No.	Color of Wire	Signal Name
78G	O	-
79G	L	-

Connector No.	B48
Connector Name	WIRE TO WIRE
Connector Color	WHITE

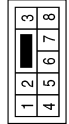

Terminal No.	Color of Wire	Signal Name
4	O	-
5	W	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

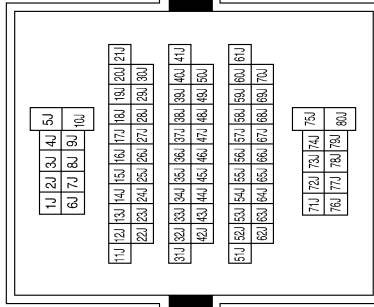

Terminal No.	Color of Wire	Signal Name
73J	O	-
74J	W	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# REAR WIPER AND WASHER SYSTEM


## < COMPONENT DIAGNOSIS >

Connector No.	D409
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	—

Connector No.	D405
Connector Name	WIRE TO WIRE
Connector Color	WHITE

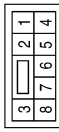

Terminal No.	Color of Wire	Signal Name
4	O	—
5	W	—
6	B	—

Connector No.	D402
Connector Name	WIRE TO WIRE
Connector Color	WHITE

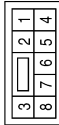


Terminal No.	Color of Wire	Signal Name
4	O	—
5	W	—

Connector No.	D650
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	B	—

Connector No.	D509
Connector Name	REAR WIPER MOTOR
Connector Color	WHITE

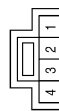

Terminal No.	Color of Wire	Signal Name
1	B	—
2	O	—
3	—	—
4	W	—

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	O	—
5	W	—
6	B	—

AWLIA0338GB



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004993477

#### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
BACK DOOR SW	Back door closed	OFF
	Back door opened	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON
HEADLAMP SW1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HEADLAMP SW2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >


Monitor Item	Condition	Value/Status
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY ON SW	Mechanical key is removed from key cylinder	OFF
	Mechanical key is inserted to key cylinder	ON
KEYLESS LOCK	LOCK button of key fob is not pressed	OFF
	LOCK button of key fob is pressed	ON
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	OFF
	UNLOCK button of key fob is pressed	ON
OIL PRESS SW	<ul style="list-style-type: none"> <li>• Ignition switch OFF or ACC</li> <li>• Engine running</li> </ul>	OFF
	Ignition switch ON	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
RR WASHER SW	Rear washer switch OFF	OFF
	Rear washer switch ON	ON
RR WIPER INT	Rear wiper switch OFF	OFF
	Rear wiper switch INT	ON
RR WIPER ON	Rear wiper switch OFF	OFF
	Rear wiper switch ON	ON
RR WIPER STOP	Rear wiper stop position	OFF
	Other than rear wiper stop position	ON
TAIL LAMP SW	Lighting switch OFF	OFF
	Lighting switch 1ST	ON
TRNK OPNR SW	When back door opener switch is not pressed	OFF
	When back door opener switch is pressed	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## Terminal Layout

INFOID:000000004993478

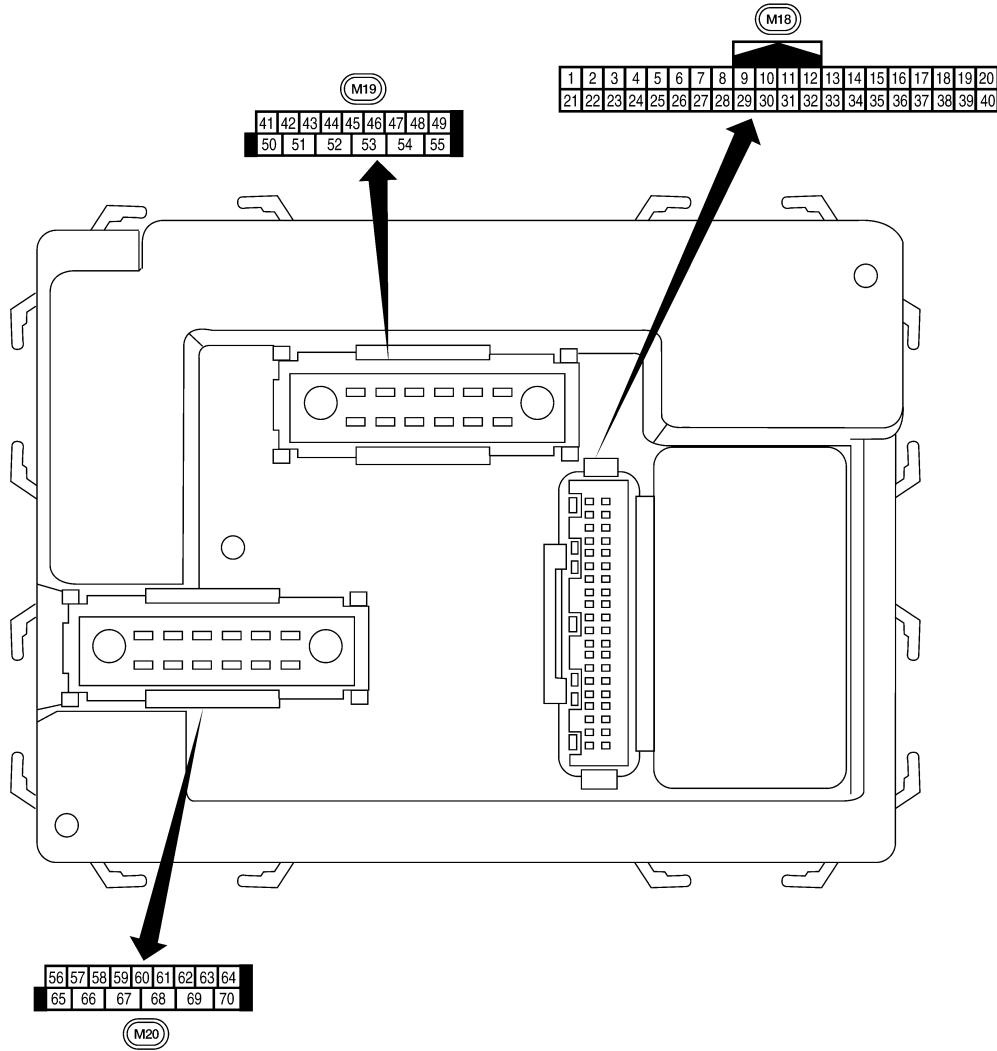

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


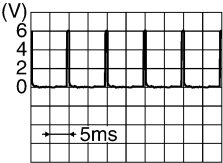

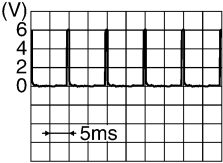
## Physical Values

LIA2443E

INFOID:000000004993479

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	P	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	SB	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	V	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	L	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	R	Combination switch input 1				
7	GR	Front door lock assembly LH (key cylinder switch) and back door key cylinder switch (unlock)	Input	OFF	ON (open, 2nd turn)	Momentary 1.5V
					OFF (closed)	0V
8	SB	Front door lock assembly LH (key cylinder switch) and back door key cylinder switch (lock)	Input	OFF	ON (open)	Momentary 1.5V
					OFF (closed)	0V
9	Y	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
11	G/B	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	LG	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >





Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
13	L	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	W	Tire pressure warning check connector	Input	OFF	—	5V
18	BR	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V
19	V	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	
20	G	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	
21	GR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
23	G	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	G	Hazard switch	Input	OFF	ON	0V
					OFF	5V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

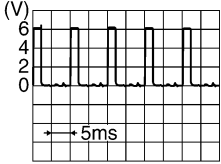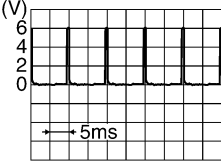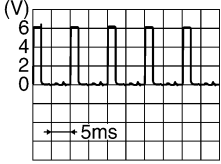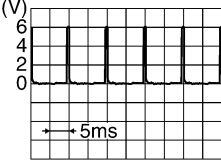Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	O	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	GR	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	G	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
35	BR	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
36	LG	Combination switch output 1				
37	B	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
38	W/R	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
43	Y	Back door switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
44	O	Rear wiper auto stop switch	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
45	V	Lock switch	Input	OFF	ON (lock)	0V
					OFF	Battery voltage

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)	
				Ignition switch	Operation or condition		
46	LG	Unlock switch	Input	OFF	ON (unlock)	0V	
					OFF	Battery voltage	
47	GR	Front door switch LH	Input	OFF	ON (open)	0V	
					OFF (closed)	Battery voltage	
48	P	Rear door switch LH	Input	OFF	ON (open)	0V	
					OFF (closed)	Battery voltage	
49	L	Cargo lamp	Output	OFF	Any door open (ON)	0V	
					All doors closed (OFF)	Battery voltage	
51	G	Trailer turn signal (right)	Output	ON	Turn right ON	<p style="text-align: right; font-size: small;">SKIA3009J</p>	
52	V	Trailer turn signal (left)	Output	ON	Turn left ON	<p style="text-align: right; font-size: small;">SKIA3009J</p>	
55	W	Rear wiper output circuit 1	Output	ON	OFF	0	
					ON	Battery voltage	
56	V	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V	
				ON	—	Battery voltage	
57	R/Y	Battery power supply	Input	OFF	—	Battery voltage	
59	GR	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V	
					ON (unlock)	Battery voltage	
60	LG	Turn signal (left)	Output	ON	Turn left ON	<p style="text-align: right; font-size: small;">SKIA3009J</p>	
61	G	Turn signal (right)	Output	ON	Turn right ON	<p style="text-align: right; font-size: small;">SKIA3009J</p>	
63	BR	Interior room/map lamp	Output	OFF	Any door switch	ON (open)	0V
						OFF (closed)	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	L	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	O	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
70	W	Battery power supply	Input	OFF	—	Battery voltage




# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## Wiring Diagram

INFOID:00000004993480

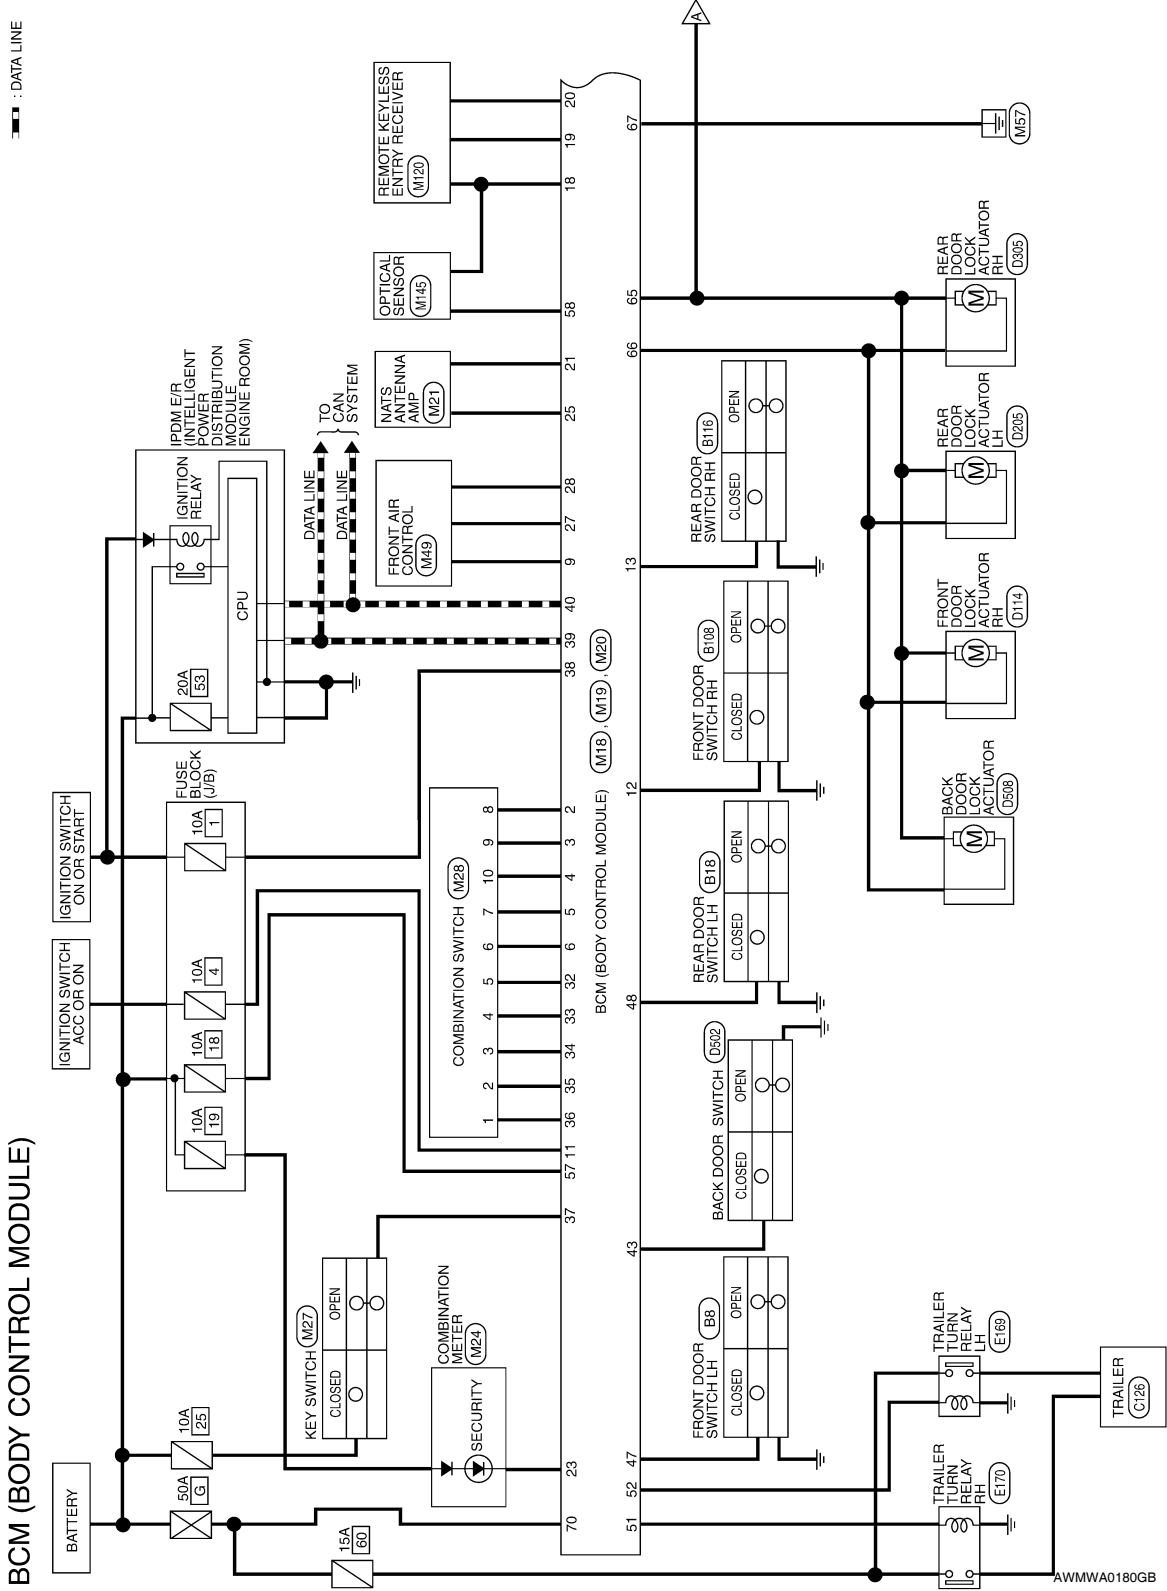


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

⬡ : WITH VANITY LAMPS

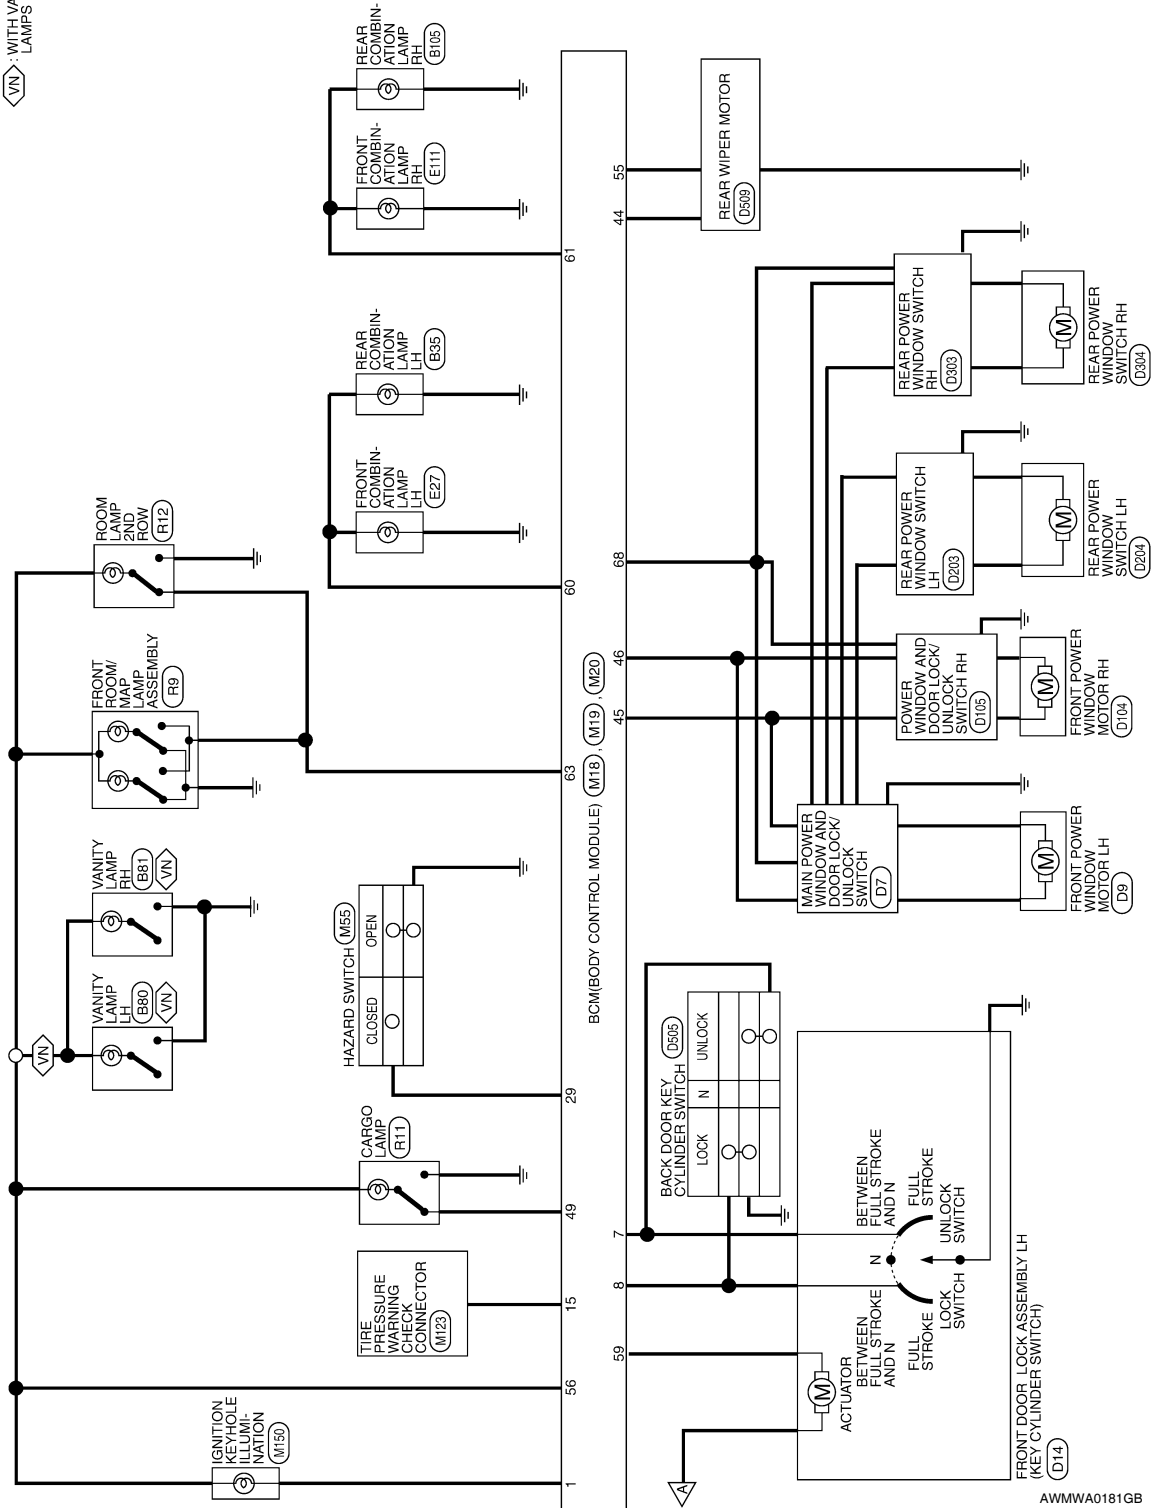


AWMWA0181GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

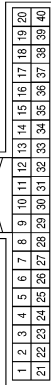

Terminal No.	Color of Wire	Signal Name
1	BR	KEY RING OUTPUT
2	P	COMBI SW INPUT 5 (LOW SIDE)
3	SB	COMBI SW INPUT 3 (LOW SIDE)
4	V	COMBI SW INPUT 4 (LOW SIDE)
5	L	COMBI SW INPUT 2 (LOW SIDE)
6	R	COMBI SW INPUT 1 (LOW SIDE)

Terminal No.	Color of Wire	Signal Name
7	GR	KEY CYLINDER UNLOCK SW
8	SB	KEY CYLINDER LOCK SW
9	Y	DEFOGGER SW
10	-	-
11	G/B	ACC_SW
12	LG	DOOR SW (AS)
13	L	DOOR SW (RR)
14	-	-
15	W	TPMS MODE TRIGGER SW
16	-	-
17	-	-
18	BR	KEYLESS & AUTO LIGHT SENSOR GND
19	V	KEYLESS TUNER POWER SUPPLY OUTPUT
20	G	KEYLESS TUNER SIGNAL
21	GR	IMMOBILISER ATNENNA SIG (CLOCK)

Terminal No.	Color of Wire	Signal Name
22	-	-
23	G	SECURITY INDICATOR OUTPUT
24	-	-
25	BR	IMMOBILISER ATNENNA SIG (TX,RX)
26	-	-
27	W	AIRCON SW
28	R	BLOWER FAN SW
29	G	HAZARD SW
30	-	-
31	-	-
32	O	COMBI SW OUTPUT 5 (PULL UP SIDE)
33	GR	COMBI SW OUTPUT 4 (PULL UP SIDE)
34	G	COMBI SW OUTPUT 3 (PULL UP SIDE)
35	BR	COMBI SW OUTPUT 2 (PULL UP SIDE)
36	LG	COMBI SW OUTPUT 1 (PULL UP SIDE)
37	B	KEY SW
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	Y	BACK DOOR SW
44	O	REAR WIPER AUTO STOP SW1

Terminal No.	Color of Wire	Signal Name
45	V	CDL LOCK SW
46	LG	CDL UNLOCK SW
47	GR	DOOR SW (DR)
48	P	DOOR SW (RL)
49	L	LUGGCARGO LAMP OUTPUT
50	-	-
51	G	TRAILER FLASHER OUTPUT (RIGHT)
52	V	TRAILER FLASHER OUTPUT (LEFT)
53	-	-
54	-	-
55	W	REAR WIPER MOTOR OUTPUT 1

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



55	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
56	V	BATTERY SAVER OUTPUT
57	R/Y	BAT (FUSE)
58	-	-
59	GR	DOOR UNLOCK OUTPUT (DR)
60	LG	FLASHER OUTPUT (LEFT)

Terminal No.	Color of Wire	Signal Name
61	G	FLASHER OUTPUT (RIGHT)
62	-	-
63	BR	ROOM LAMP OUTPUT
64	-	-
65	V	DOOR LOCK OUTPUT (ALL)
66	L	DOOR UNLOCK OUTPUT (OTHER)
67	B	GND (POWER)
68	O	POWER WINDOW POWER SUPPLY OUT (LINKED TO RAP)
69	-	-
70	W	BAT (F/L)

## Fail Safe

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

AWMIA0385GB

INFOID:000000004993481

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.
U1010: CONTROL UNIT (CAN)	Inhibit engine cranking	When the BCM re-start communicating with the other modules.

## DTC Inspection Priority Chart

INFOID:000000004993482

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> <li>U1000: CAN COMM CIRCUIT</li> <li>U1010: CONTROL UNIT (CAN)</li> </ul>
2	<ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> </ul>
3	<ul style="list-style-type: none"> <li>C1729: VHCL SPEED SIG ERR</li> <li>C1735: IGNITION SIGNAL</li> </ul>
4	<ul style="list-style-type: none"> <li>C1708: [NO DATA] FL</li> <li>C1709: [NO DATA] FR</li> <li>C1710: [NO DATA] RR</li> <li>C1711: [NO DATA] RL</li> <li>C1712: [CHECKSUM ERR] FL</li> <li>C1713: [CHECKSUM ERR] FR</li> <li>C1714: [CHECKSUM ERR] RR</li> <li>C1715: [CHECKSUM ERR] RL</li> <li>C1716: [PRESSDATA ERR] FL</li> <li>C1717: [PRESSDATA ERR] FR</li> <li>C1718: [PRESSDATA ERR] RR</li> <li>C1719: [PRESSDATA ERR] RL</li> <li>C1720: [CODE ERR] FL</li> <li>C1721: [CODE ERR] FR</li> <li>C1722: [CODE ERR] RR</li> <li>C1723: [CODE ERR] RL</li> <li>C1724: [BATT VOLT LOW] FL</li> <li>C1725: [BATT VOLT LOW] FR</li> <li>C1726: [BATT VOLT LOW] RR</li> <li>C1727: [BATT VOLT LOW] RL</li> </ul>

## DTC Index

INFOID:000000004993483

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	<a href="#">BCS-28</a>
U1010: CONTROL UNIT (CAN)	—	—	<a href="#">BCS-29</a>

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
B2190: NATS ANTENNA AMP	—	—	<a href="#">SEC-18</a>
B2191: DIFFERENCE OF KEY	—	—	<a href="#">SEC-21</a>
B2192: ID DISCORD BCM-ECM	—	—	<a href="#">SEC-22</a>
B2193: CHAIN OF BCM-ECM	—	—	<a href="#">SEC-24</a>
C1708: [NO DATA] FL	—	—	<a href="#">WT-14</a>
C1709: [NO DATA] FR	—	—	<a href="#">WT-14</a>
C1710: [NO DATA] RR	—	—	<a href="#">WT-14</a>
C1711: [NO DATA] RL	—	—	<a href="#">WT-14</a>
C1712: [CHECKSUM ERR] FL	—	—	<a href="#">WT-16</a>
C1713: [CHECKSUM ERR] FR	—	—	<a href="#">WT-16</a>
C1714: [CHECKSUM ERR] RR	—	—	<a href="#">WT-16</a>
C1715: [CHECKSUM ERR] RL	—	—	<a href="#">WT-16</a>
C1716: [PRESSDATA ERR] FL	—	—	<a href="#">WT-18</a>
C1717: [PRESSDATA ERR] FR	—	—	<a href="#">WT-18</a>
C1718: [PRESSDATA ERR] RR	—	—	<a href="#">WT-18</a>
C1719: [PRESSDATA ERR] RL	—	—	<a href="#">WT-18</a>
C1720: [CODE ERR] FL	—	—	<a href="#">WT-16</a>
C1721: [CODE ERR] FR	—	—	<a href="#">WT-16</a>
C1722: [CODE ERR] RR	—	—	<a href="#">WT-16</a>
C1723: [CODE ERR] RL	—	—	<a href="#">WT-16</a>
C1724: [BATT VOLT LOW] FL	—	—	<a href="#">WT-16</a>
C1725: [BATT VOLT LOW] FR	—	—	<a href="#">WT-16</a>
C1726: [BATT VOLT LOW] RR	—	—	<a href="#">WT-16</a>
C1727: [BATT VOLT LOW] RL	—	—	<a href="#">WT-16</a>
C1729: VHCL SPEED SIG ERR	—	—	<a href="#">WT-19</a>
C1735: IGNITION SIGNAL	—	—	<a href="#">WT-20</a>

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000004993484

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
A/C COMP REQ	A/C switch OFF		OFF
	A/C switch ON		ON
TAIL&CLR REQ	Lighting switch OFF		OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		ON
HL LO REQ	Lighting switch OFF		OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)		ON
HL HI REQ	Lighting switch OFF		OFF
	Lighting switch HI		ON
FR FOG REQ	Lighting switch 2ND	Front fog lamp switch OFF	OFF
		Front fog lamp switch ON	ON
H L WASHER REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored.		OFF
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	LOW
		Front wiper switch HI	HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	OFF
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		OFF
	Ignition switch START		ON
IGN RLY	Ignition switch OFF or ACC		OFF
	Ignition switch ON		ON
RR DEF REQ	Rear defogger switch OFF		OFF
	Rear defogger switch ON		ON
OIL P SW	Ignition switch OFF, ACC or engine running		OPEN
	Ignition switch ON		CLOSE
DTRL REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored.		OFF
HOOD SW	<b>NOTE:</b> This item is displayed, but cannot be monitored.		OFF

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
THFT HRN REQ	Not operated	OFF
	<ul style="list-style-type: none"><li>• Panic alarm is activated</li><li>• Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li></ul>	ON
HORN CHIRP	Not operated	OFF
	Door locking with keyfob (horn chirp mode)	ON




# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## Terminal Layout

INFOID:000000004993485

### TERMINAL LAYOUT

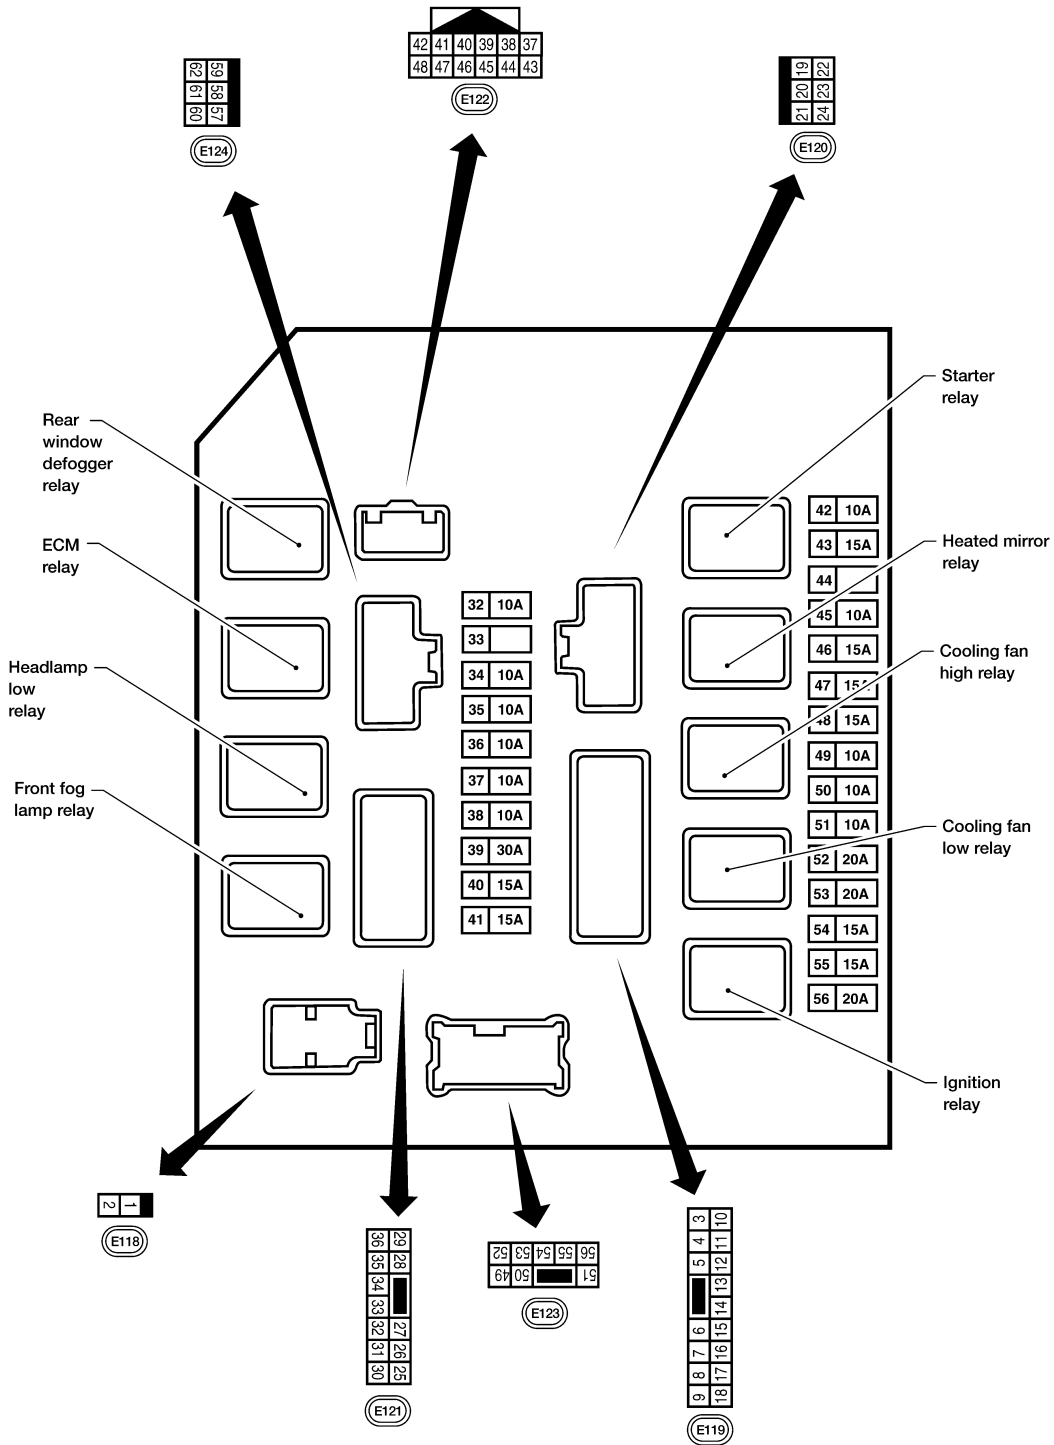

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

### Physical Values

### PHYSICAL VALUES

WKIA5883E

INFOID:000000004993486




# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	W	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	G	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	P	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	V	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	BR	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	W/R	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	R/B	Fuse 45	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	W/G	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	R	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	W/G	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50 (VDC)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50 (ABS)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	W/G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W/G	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W	Starter motor	Output	START	—	Battery voltage
20	BR	Cooling fan motor (low)	Output	ON or START	—	Battery voltage
21	GR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	LG	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

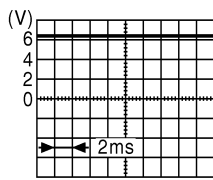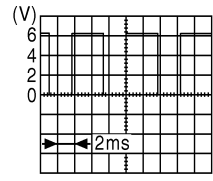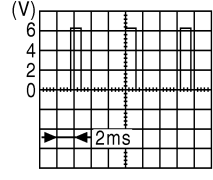Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	P	Cooling fan motor (high)	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
28	R	LH front parking and front side marker lamp	Output	OFF	Lighting switch 1st position OFF	0V
					Lighting switch 1st position ON	Battery voltage
29	G	Trailer tow relay	Output	ON	Lighting switch 1st position OFF	0V
					Lighting switch 1st position ON	Battery voltage
30	R/B	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	GR	Wiper low speed signal	Output	ON or START	Wiper switch OFF	Battery voltage
					Wiper switch LO or INT	0V
35	L	Wiper high speed signal	Output	ON or START	Wiper switch OFF, LO, INT	Battery voltage
					Wiper switch HI	0V
37	Y	Power generation command signal	Output	—	Ignition switch ON	 <p style="text-align: right;">JPMIA0001GB 6.3 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right;">JPMIA0002GB 3.8 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right;">JPMIA0003GB 1.4 V</p>
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
43	G	Wiper auto stop signal	Input	ON or START	Wiper switch	OFF, LO, INT	Battery voltage
44	R	Daytime light relay control (Canada only)	Input	ON	Daytime light system active		0V
					Daytime light system inactive		Battery voltage
45	LG	Horn relay control	Input	ON	When door locks are operated using keyfob (OFF → ON)*		Battery voltage → 0V
46	V	Fuel pump relay control	Input	—	Ignition switch ON or START		0V
					Ignition switch OFF or ACC		Battery voltage
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START		0V
					Ignition switch OFF or ACC		Battery voltage
48	R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"		0V
					Selector lever any other position		Battery voltage
49	GR	Front RH parking and front side marker lamp	Output	OFF	Lighting switch 1st position	OFF	0V
						ON	Battery voltage
50	W	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
51	V	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
52	P	LH low beam head-lamp	Output	—	Lighting switch in 2nd position		Battery voltage
54	R	RH low beam head-lamp	Output	—	Lighting switch in 2nd position		Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position		Battery voltage
56	L	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position		Battery voltage
57	GR	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	OFF	0V
						ON	Battery voltage
59	B	Ground	Input	—	—		0V
60	GR	Rear window defogger relay	Output	ON or START	Rear defogger switch ON		Battery voltage
					Rear defogger switch OFF		0V
61	R/B	Fuse 32	Output	OFF	—		Battery voltage


\*: When horn reminder is ON

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## Wiring Diagram

INFOID:000000004993487

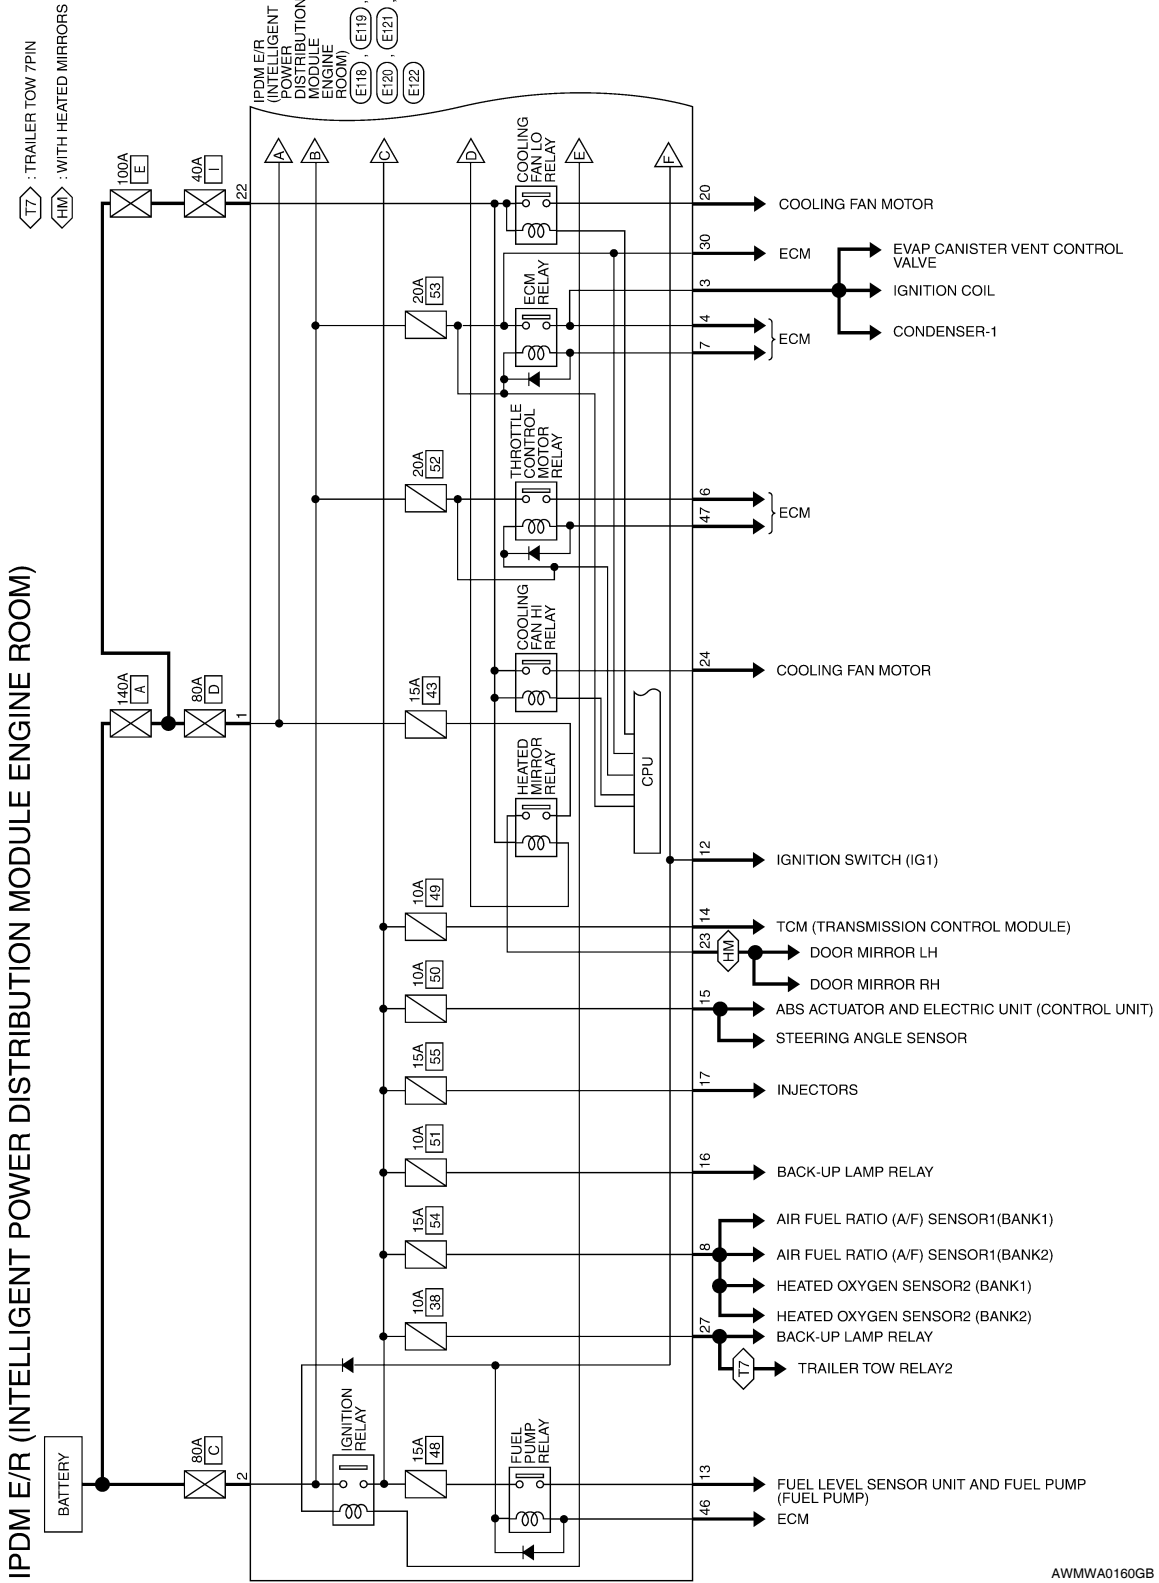

AWMWA0160GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

: WITH FRONT FOG LAMPS  
 : FOR CANADA  
 : DATA LINE

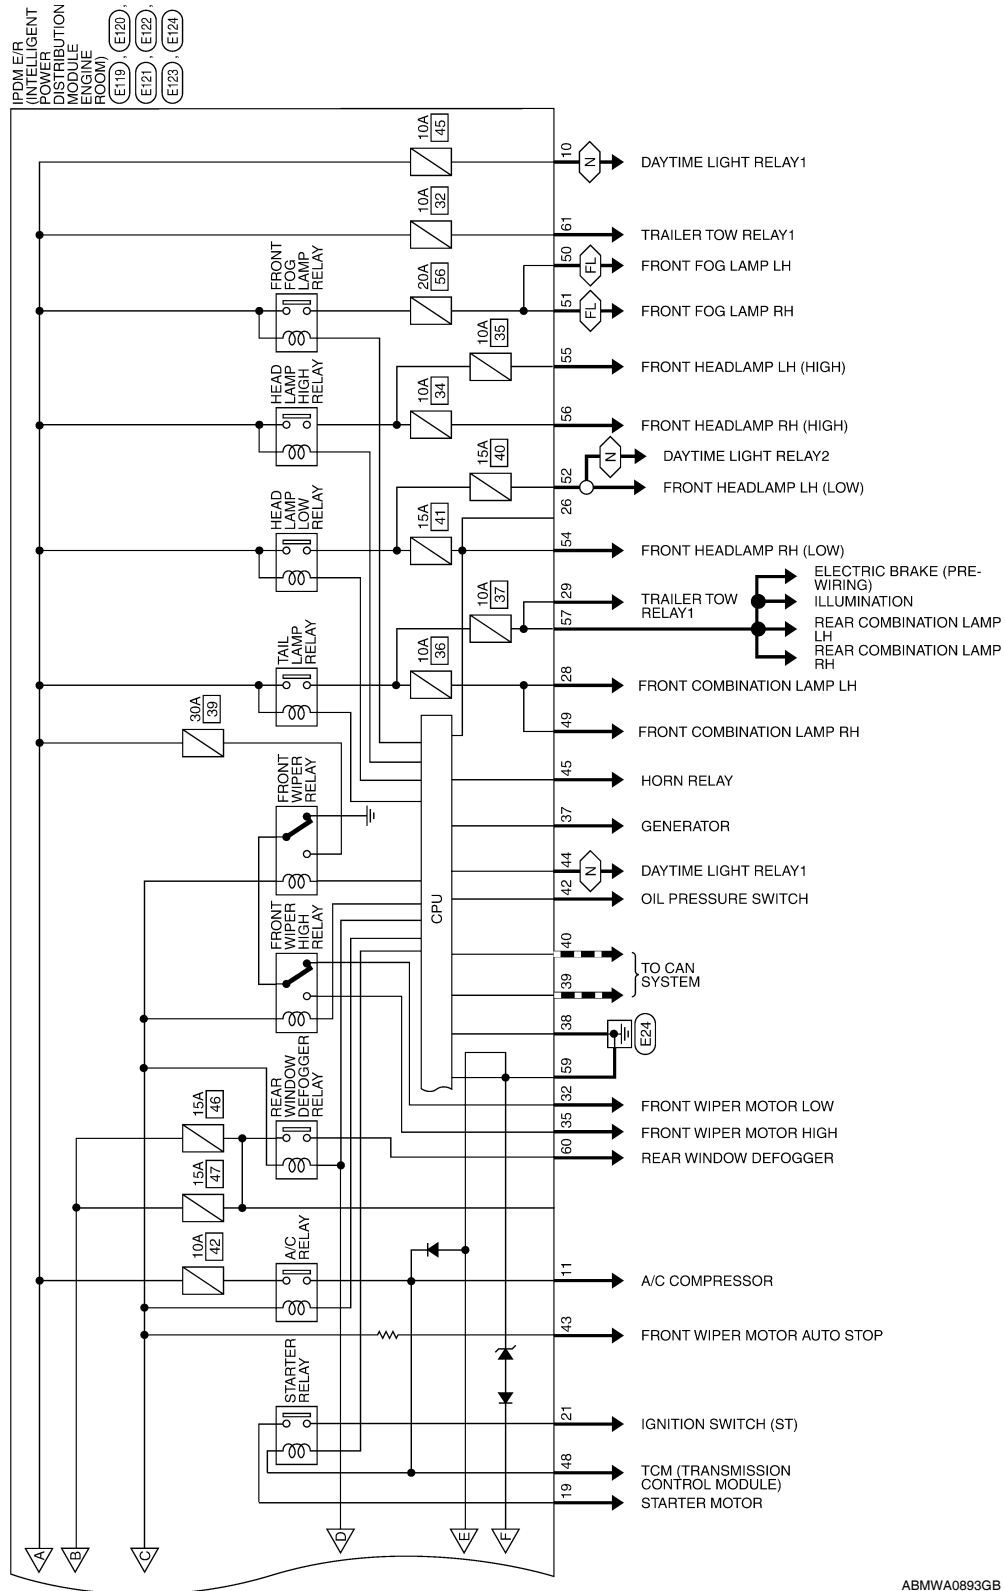

ABMWA0893GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >


## IPDME/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	F/LUSM
2	R	F/LMAIN

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

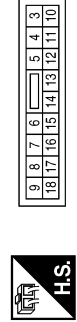

Terminal No.	Color of Wire	Signal Name
3	G	IGN COIL
4	P	ENG SUPPLY
5	-	-
6	V	ETC


Terminal No.	Color of Wire	Signal Name
7	BR	ECM RLY CONT
8	W/R	O2 SENSORS
9	-	-
10	R/B	DTRL RLY SUPPLY
11	Y	A/C COMPRESSOR
12	W/G	IGN SW (IG1)
13	R	FUEL PUMP
14	W/G	AT ECU IGN SUPPLY
15	W/R	ABS IGN SUPPLY
16	W/G	REVERSE LAMP
17	W/G	INJECTOR
18	-	-

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
20	BR	MOTOR FAN 1
21	GR	IGN SW (ST)
22	G	F/L M/FAN
23	LG	HEATED MIRROR
24	P	MOTOR FAN 2

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

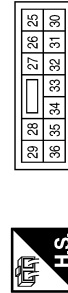

Terminal No.	Color of Wire	Signal Name
25	-	-
26	-	-
27	W	T TOW REV LAMP
28	R	ILLUMINATION
29	G	TRAILER RLY CONT
30	R/B	ECM BAT

Terminal No.	Color of Wire	Signal Name
31	-	-
32	GR	FR WIPER LO
33	-	-
34	-	-
35	L	FR WIPER HI
36	-	-

AWMIA0334GB

A B C D E F G H I J K L M N O P



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



59	58	57
62	61	60

Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
58	-	-
59	B	GND (POWER)
60	GR	RR DEF
61	R/B	TRAIL_RLY SUPPLY
62	-	-

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



51	50	49
56	55	54 53 52

Terminal No.	Color of Wire	Signal Name
49	GR	ILLUMINATION
50	W	FR FOG LAMP LH
51	V	FR FOG LAMP RH
52	P	H/LAMP LO LH
53	-	-
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	39	38	37
48	47	46	45	44 43

Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
41	-	-
42	GR	OIL PRESSURE SW
43	G	AUTO STOP SW
44	R	DTRL RLY CONT
45	LG	ANT THEFT HORN
46	V	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	R	INHIBIT

AWMIA0335GB

INFOID:000000004993488

## Fail Safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS >

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> <li>• Turns ON the cooling fan relay when the ignition switch is turned ON</li> <li>• Turns OFF the cooling fan relay when the ignition switch is turned OFF</li> </ul>

### If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>
<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Tail lamps</li> </ul>	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

#### NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

#### NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

## DTC Index

INFOID:000000004993489

CONSULT-III display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	<a href="#">PCS-18</a>

### NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

# WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### WIPER AND WASHER SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000003084563

**CAUTION:**

Perform the self-diagnosis with CONSULT-III before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

Symptom	Probable malfunction location	Inspection item	
Front wiper does not operate.	HI only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (HI) circuit Refer to <a href="#">WW-21, "Component Function Check"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
	LO and INT	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		<ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul>	Front wiper motor (LO) circuit Refer to <a href="#">WW-19, "Component Function Check"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
	INT only	<ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
	HI, LO, and INT	SYMPTOM DIAGNOSIS "FRONT WIPER DOES NOT OPERATE" Refer to <a href="#">WW-71, "Diagnosis Procedure"</a> .	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## WIPER AND WASHER SYSTEM SYMPTOMS

### < SYMPTOM DIAGNOSIS >

Symptom	Probable malfunction location	Inspection item	
Front wiper does not stop.	HI only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	LO only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	INT only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		Front wiper request signal <ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>	IPDM E/R DATA MONITOR "FR WIP REQ"
	Front wiper does not operate normally.	Intermittent adjustment cannot be performed.	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>
BCM			—
Intermittent control linked with vehicle speed cannot be performed.		Check the vehicle speed detection wiper setting. Refer to <a href="#">BCS-20, "WIPER : CONSULT-III Function (BCM - WIPER)"</a> .	
Wiper is not linked to the washer operation.		<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		BCM	—
Does not return to stop position (Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation).	<ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul>	Front wiper auto stop signal circuit Refer to <a href="#">WW-23, "Component Function Check"</a> .	
Rear wiper does not operate.	ON only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
	INT only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
	ON and INT	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		<ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Harness between rear wiper motor and ground</li> <li>• Rear wiper motor</li> </ul>	Combination switch Refer to <a href="#">WW-28, "Component Function Check"</a> .

## WIPER AND WASHER SYSTEM SYMPTOMS

### < SYMPTOM DIAGNOSIS >

Symptom		Probable malfunction location	Inspection item
Rear wiper does not stop.	ON only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Rear wiper motor circuit Refer to <a href="#">WW-28, "Component Function Check"</a> .
	INT only	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
Rear wiper does not operate normally.	Wiper is not linked to the washer operation.	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between rear wiper motor and BCM</li> <li>• BCM</li> </ul>	Combination switch Refer to <a href="#">BCS-51, "Symptom Table"</a> .
		BCM	—
	Rear wiper does not return to the Stop position (Stops after a five-second operation).	<ul style="list-style-type: none"> <li>• BCM</li> <li>• Harness between rear wiper motor and BCM</li> <li>• Rear wiper motor</li> </ul>	Rear wiper auto stop signal circuit Refer to <a href="#">WW-30, "Component Function Check"</a> .
Rear wiper stops after operating for five seconds when ignition switch is turned ON.			

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

### NORMAL OPERATING CONDITION

#### Description

INFOID:000000003084564

#### FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

#### REAR WIPER MOTOR PROTECTION FUNCTION

- BCM may stop rear wiper to protect the rear wiper motor when the rear wiper is stopped for 5 seconds or more due to a snowfall.
- Rear wiper operates normally one minute after the obstacles are removed with rear wiper OFF.

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT WIPER DOES NOT OPERATE

### Description

INFOID:000000003084565

The front wiper does not operate under any operation conditions.

### Diagnosis Procedure

INFOID:000000003084566

#### 1. CHECK WIPER RELAY OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-13, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/HI operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. While operating the test item, check front wiper operation.

**LO** : Front wiper LO operation

**HI** : Front wiper HI operation

**OFF** : Stop the front wiper.

Is front wiper operation normal?

YES >> GO TO 5

NO >> GO TO 2

#### 2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Unit	Location	Fuse No.	Capacity
Front wiper motor	IPDM E/R	39	30 A

Is the fuse blown?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 3

#### 3. CHECK FRONT WIPER MOTOR GROUND OPEN CIRCUIT

1. Disconnect front wiper motor.
2. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Yes
E23	2		Yes


Does continuity exist?

YES >> GO TO 4

NO >> Repair or replace harness.

#### 4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE


##### Ⓜ CONSULT-III ACTIVE TEST

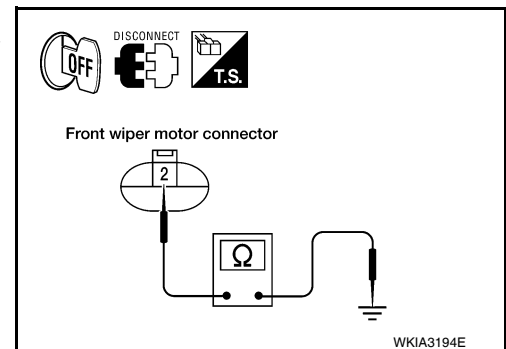

# FRONT WIPER DOES NOT OPERATE

## < SYMPTOM DIAGNOSIS >

1. Turn the ignition switch ON.
2. Select "FRONT WIPER" of IPDM E/R active test item.
3. With operating the test item, check voltage between IPDM E/R harness connector and ground.

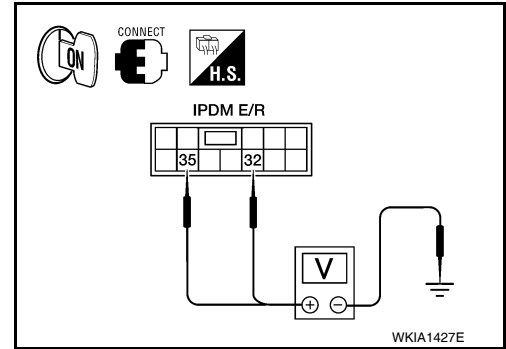

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E121	32	LO	Battery voltage
		OFF	0 V
	35	HI	Battery voltage
OFF		0 V	

Is the measurement value normal?

YES >> Replace front wiper motor. Refer to [WW-74, "Removal and Installation"](#).

NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation of IPDM E/R"](#).

## 5. CHECK FRONT WIPER REQUEST SIGNAL INPUT

### CONSULT-III DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the status of "FR WIP REQ".

Monitor item	Condition		Monitor status
FR WIP REQ	Front wiper switch HI	HI	ON
		STOP	OFF
	Front wiper switch LO	1LOW	ON
		STOP	OFF

Is the status of item normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation of IPDM E/R"](#).

NO >> GO TO 6

## 6. CHECK COMBINATION SWITCH

1. Perform the inspection of the combination switch. Refer to [BCS-51, "Symptom Table"](#).

Is combination switch normal?

YES >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

NO >> Repair or replace the applicable parts.



# PRECAUTION

< PRECAUTION >

## PRECAUTION

### PRECAUTION

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004920155

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# FRONT WIPER AND WASHER SYSTEM

< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### FRONT WIPER AND WASHER SYSTEM

#### Removal and Installation

INFOID:000000003292806


#### FRONT WIPER ARMS

##### Removal

1. Remove wiper arm covers and wiper arm nuts.
2. Remove front RH wiper arm and front LH wiper arm.
3. Remove front RH blade assembly and front LH blade assembly.

##### Installation

1. Operate wiper motor one full cycle, then turn "OFF" (Auto Stop).
2. Clean up the pivot area as shown. This will reduce possibility of wiper arm looseness.

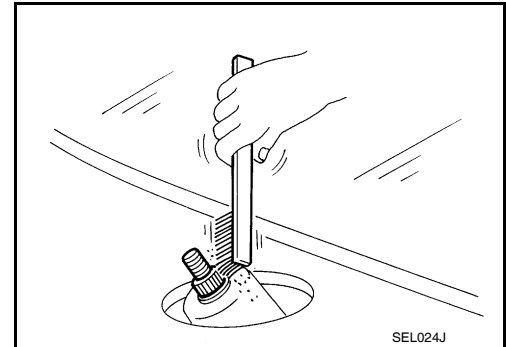

3. Install front RH blade assembly and front LH blade assembly.
4. Install front RH wiper arm and front LH wiper arm.
5. Ensure that wiper blades stop within proper clearance. See "FRONT WIPER ARM ADJUSTMENT".
6. Tighten wiper arm nuts to specified torque, and install wiper arm covers.

**Front wiper arm nuts : 23.6 N·m (2.4 kg-m, 17 ft-lb)**


#### FRONT WIPER ARM ADJUSTMENT

1. Operate windshield washer and wiper motor one full cycle, then turn "OFF" (Auto Stop).
2. Lift the wiper blade up and then rest it onto glass surface, check the blade clearance "L1" and "L2".

**Clearance "L1" : 24.5 - 39.5 mm (0.965 - 1.555 in)**

**Clearance "L2" : 23.5 - 38.5 mm (0.925 - 1.516 in)**

3. Remove wiper arm covers and wiper arm nuts.
4. Adjust front wiper arms on wiper motor pivot shafts to obtain above specified blade clearances.
5. Tighten wiper arm nuts to specified torque, and install wiper arm covers.

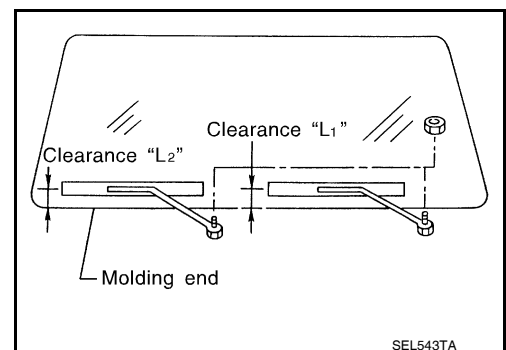

**Front wiper arm nuts : 23.6 N·m (2.4 kg-m, 17 ft-lb)**

#### WIPER MOTOR AND LINKAGE



# FRONT WIPER AND WASHER SYSTEM


## < ON-VEHICLE REPAIR >

Installation is in the reverse order of removal.

### WIPER AND WASHER SWITCH

#### Removal

1. Remove instrument lower cover LH. Refer to [IP-11. "Exploded View"](#).
2. Remove steering column cover lower and steering column cover upper. Refer to [ST-14. "Removal and Installation"](#).
3. Disconnect wiper washer switch connector.
4. Pinch tabs at wiper and washer switch base and slide switch away from steering column.

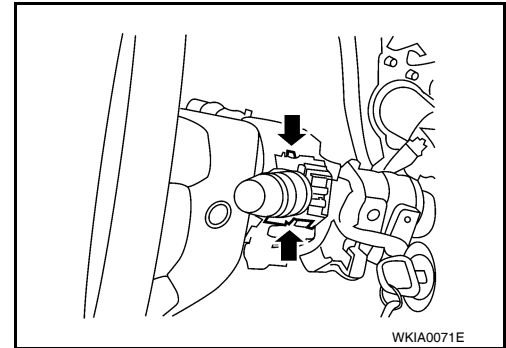


#### Installation

Installation is in the reverse order of removal.

### WASHER FLUID RESERVOIR

#### Removal


1. Remove RH front fender protector. Refer to [EXT-19. "Front Fender Protector"](#).
2. Remove clip, then remove washer fluid reservoir filler neck from washer fluid reservoir.

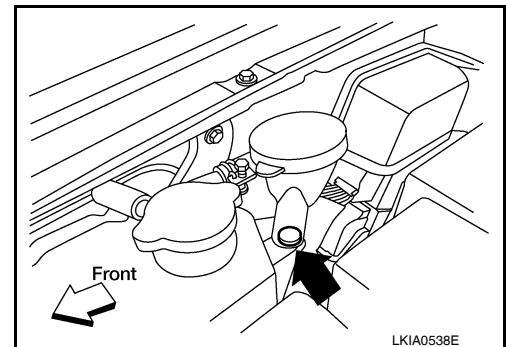


# FRONT WIPER AND WASHER SYSTEM

## < ON-VEHICLE REPAIR >

3. Disconnect front and rear washer hoses.
4. Disconnect front and rear washer motor connector.
5. Disconnect washer fluid level sensor connector.

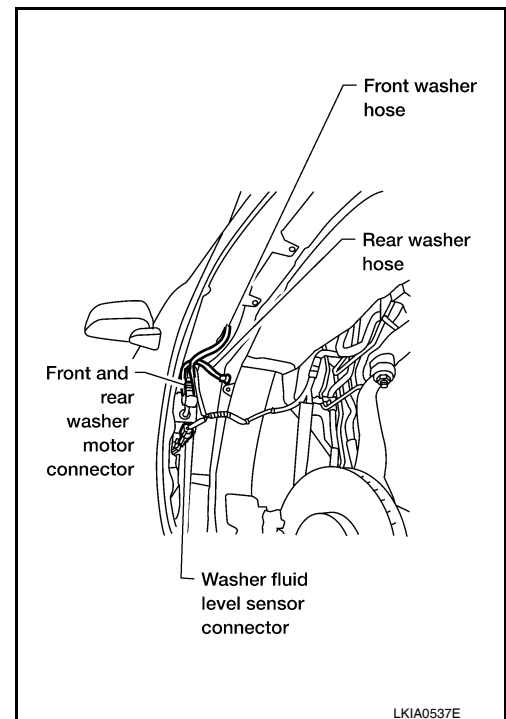

6. Remove washer fluid reservoir screws and remove washer fluid reservoir.

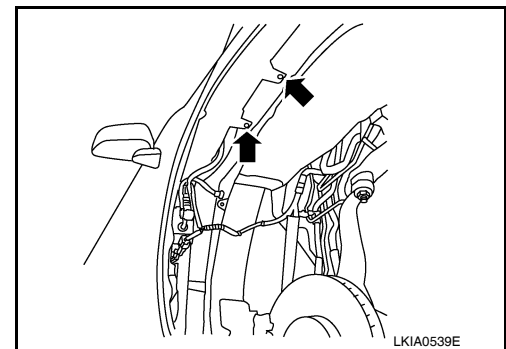

### Installation

Installation is in the reverse order of removal.


### **CAUTION:**

**After installation, add washer fluid to the upper level of the washer fluid reservoir inlet and check for leaks.**

## FRONT AND REAR WASHER MOTOR

### Removal

1. Remove RH front fender protector. Refer to [EXT-19. "Front Fender Protector"](#).
2. Disconnect the front and rear washer hoses.
3. Disconnect the washer motor connectors.
4. Slide retaining ring upward to release front and rear washer motor.

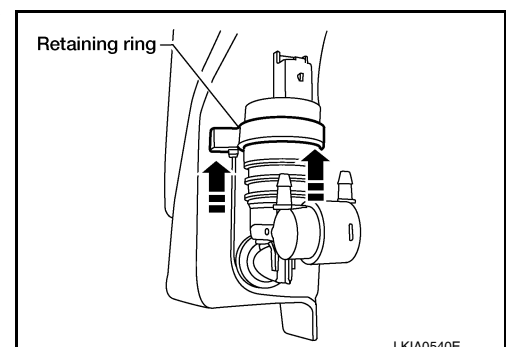

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

# FRONT WIPER AND WASHER SYSTEM

## < ON-VEHICLE REPAIR >

5. Remove front and rear washer motor from washer fluid reservoir.

### Installation

Installation is in the reverse order of removal.


### CAUTION:

**When installing front and rear washer motor, there should be no packing twists, etc.**

## WASHER FLUID LEVEL SENSOR

### Removal

1. Remove washer fluid reservoir. See "WASHER FLUID RESERVOIR".
2. Lift level sensor out of washer fluid reservoir in the direction of the arrow as shown.

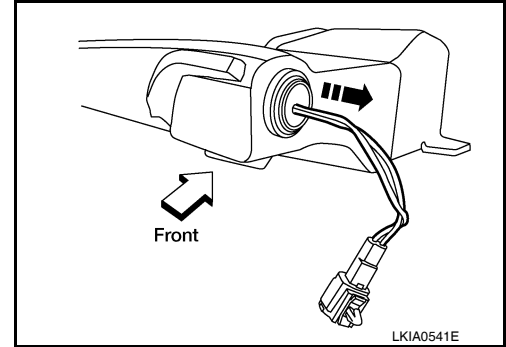


### Installation

Installation is in the reverse order of removal.

## Washer Hose Layout

INFOID:000000003292807

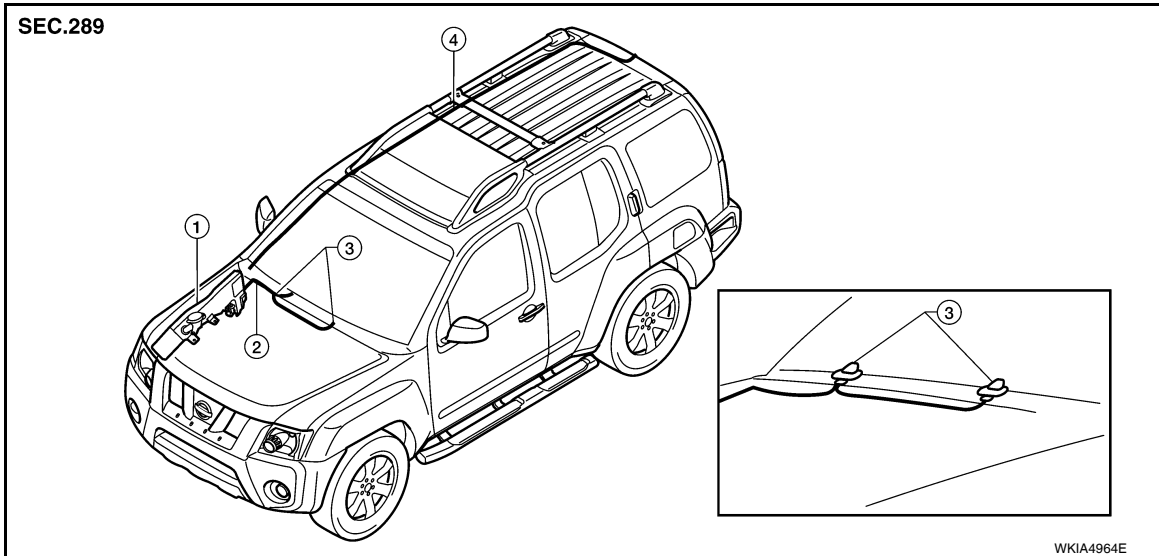

1. Washer fluid reservoir
2. Front washer hose
3. Washer nozzle
4. Rear washer hose


# FRONT WIPER AND WASHER SYSTEM

< ON-VEHICLE REPAIR >

## Washer Nozzle Adjustment

INFOID:000000003084569

- This vehicle is equipped with adjustable washer nozzles.
- If not satisfied with washer fluid spray coverage, confirm that the washer nozzle is installed correctly.
- If the washer nozzle is installed correctly, and the washer fluid spray coverage is not satisfactory, re-aim washer nozzle.

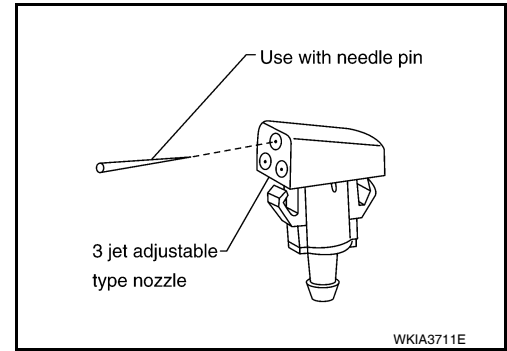

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW


# REAR WIPER AND WASHER SYSTEM

< ON-VEHICLE REPAIR >

## REAR WIPER AND WASHER SYSTEM

### Removal and Installation

INFOID:000000003292790

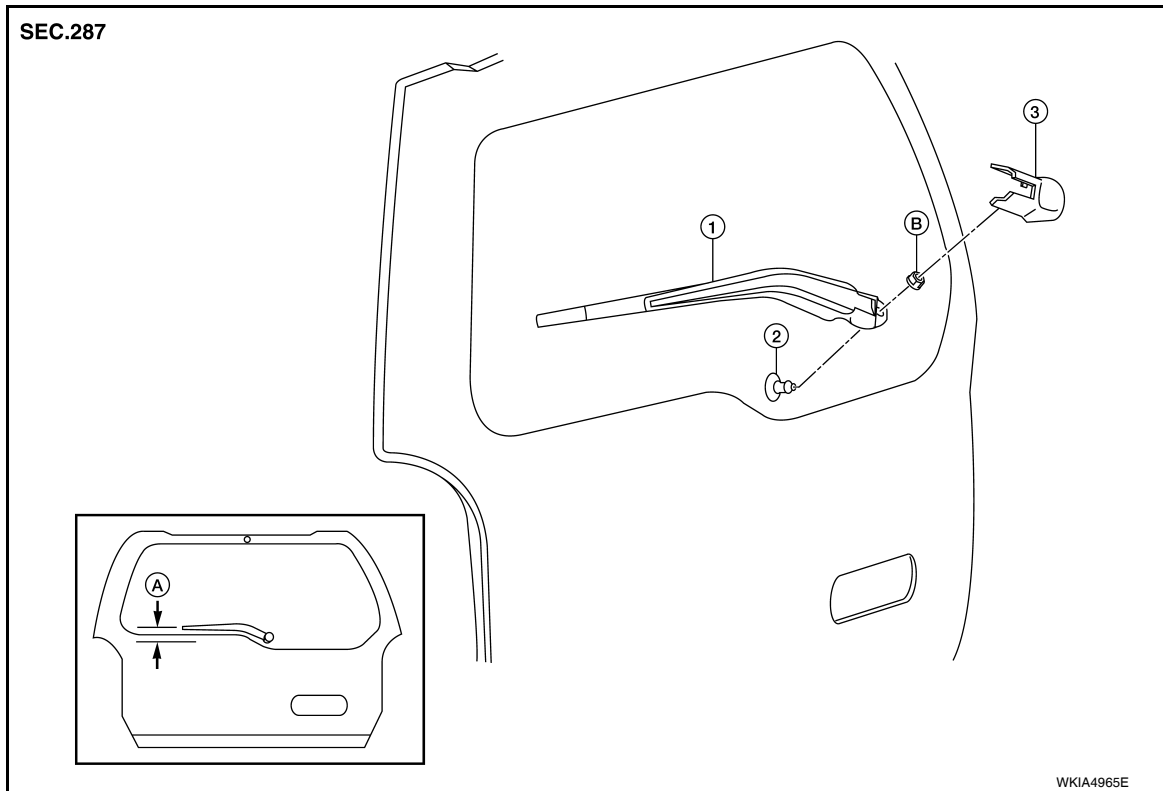

1. Rear wiper arm and blade
  2. Rear wiper motor pivot seal
  3. Rear wiper arm cover
- A. Wiper arm parallel to back glass edge B. Rear wiper arm nut


### REAR WIPER ARM

#### Removal

1. Remove rear wiper arm cover, and remove rear wiper arm nut.
2. Remove rear wiper arm.
3. Remove wiper blade.

#### Installation

1. Clean up the pivot area as illustrated. This will reduce the possibility of wiper arm looseness.

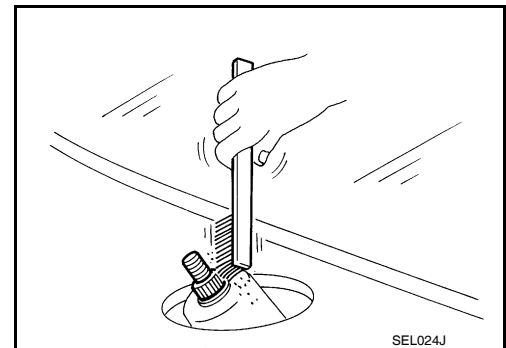

2. Install rear wiper blade.
3. Install rear wiper arm.
4. Ensure that rear wiper blade stops at proper position. See "REAR WIPER ARM ADJUSTMENT".

### REAR WIPER ARM ADJUSTMENT




# REAR WIPER AND WASHER SYSTEM

## < ON-VEHICLE REPAIR >

1. Operate rear wiper motor one full cycle, then turn "OFF" (Auto Stop).
2. Adjust rear wiper arm so that wiper arm and blade is parallel with lower edge of back glass, as shown.
3. Install rear wiper arm nut and rear wiper arm cover.

## REAR WIPER MOTOR

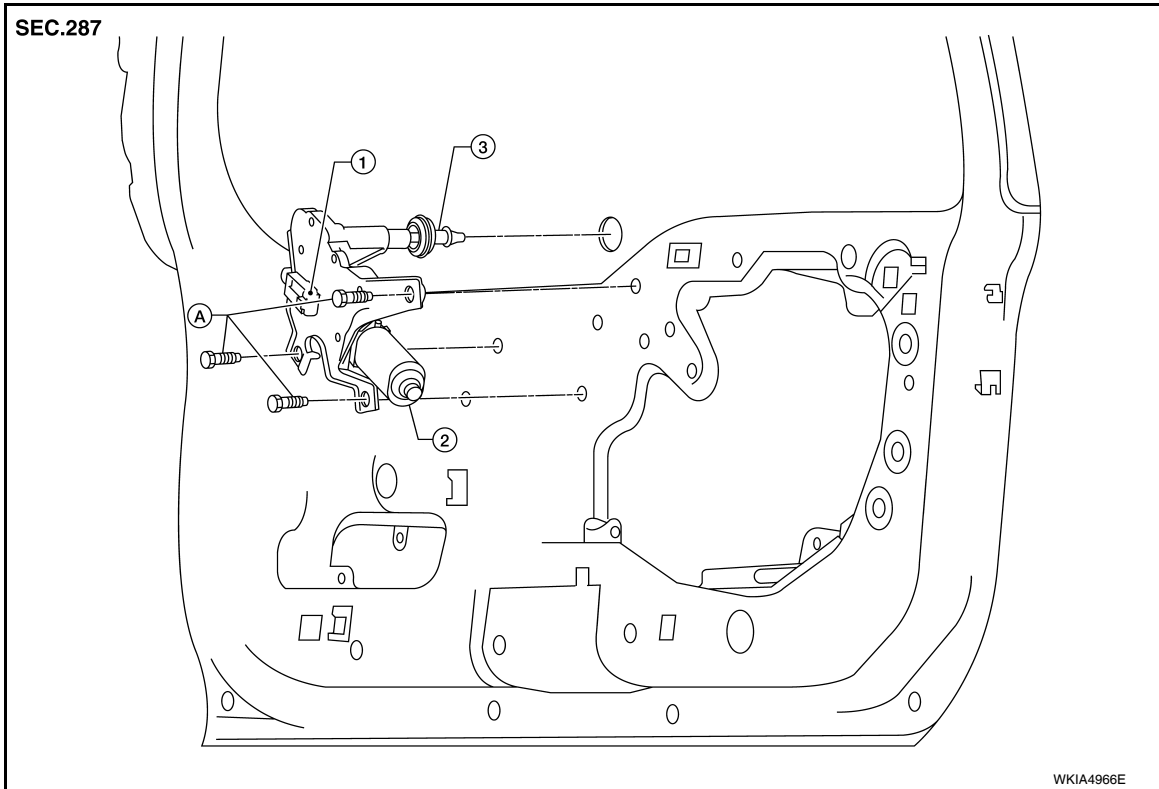

1. Rear wiper motor harness connector
  2. Rear wiper motor
  3. Rear motor pivot seal
- A. Rear wiper motor bolts

### Removal


#### **CAUTION:**

- Do not drop rear wiper motor or cause it to contact other parts.

1. Remove rear wiper arm and blade. See "REAR WIPER ARM".
2. Remove back door lower finisher. Refer to [INT-25, "Removal and Installation"](#).
3. Remove rear wiper motor cover.
4. Disconnect rear wiper motor harness connector.
5. Remove rear wiper motor.
6. Remove rear motor pivot seal.

### Installation

1. Clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

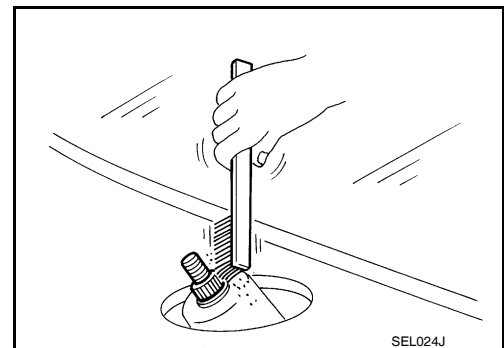


# REAR WIPER AND WASHER SYSTEM

## < ON-VEHICLE REPAIR >

2. Install rear motor pivot seal.
3. Install rear wiper motor.
4. Connect rear wiper motor harness connector.
5. Install rear wiper motor cover.
6. Install back door lower finisher. Refer to [INT-25, "Removal and Installation"](#).
7. Ensure that rear wiper blade stops at proper position. See "REAR WIPER ARM ADJUSTMENT".


## REAR WASHER HOSE LAYOUT

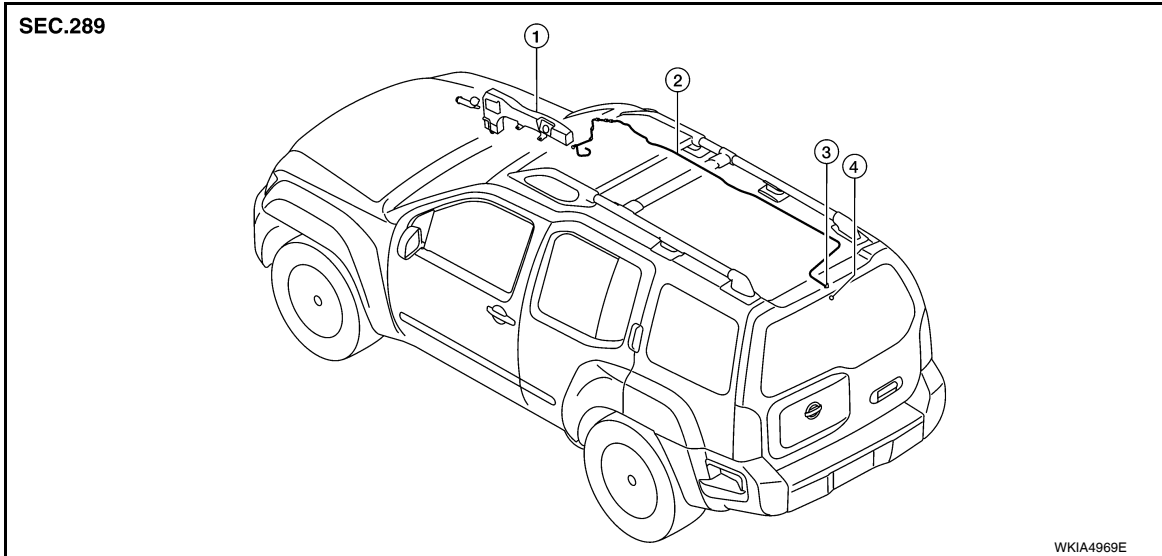

1. Washer fluid reservoir
2. Rear washer hose
3. Check valve
4. Rear washer nozzle

### NOTE:


Connect the check valve (2) to the washer fluid reservoir tube (1) so that the directional arrow on the check valve (2) points towards the washer nozzle tube (3).

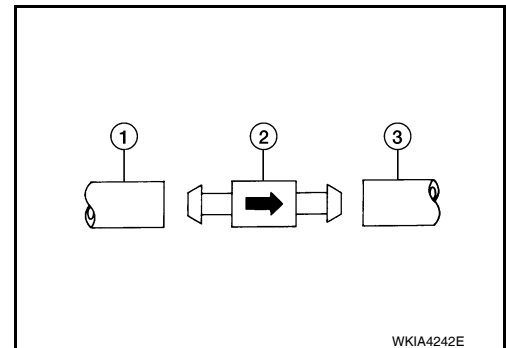

## REAR WASHER NOZZLE

### Removal


1. Remove back door upper finisher. Refer to [INT-25, "Removal and Installation"](#).
2. Disconnect rear washer hose from rear washer nozzle.

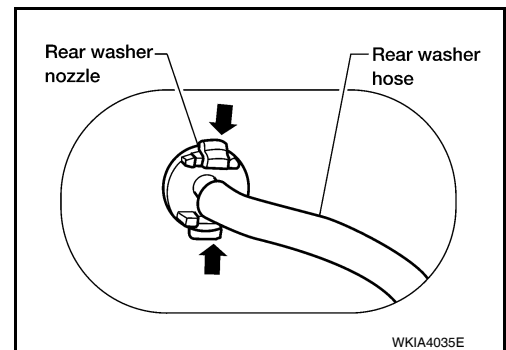

# REAR WIPER AND WASHER SYSTEM


< ON-VEHICLE REPAIR >

3. Release retaining clips, and remove rear washer nozzle.

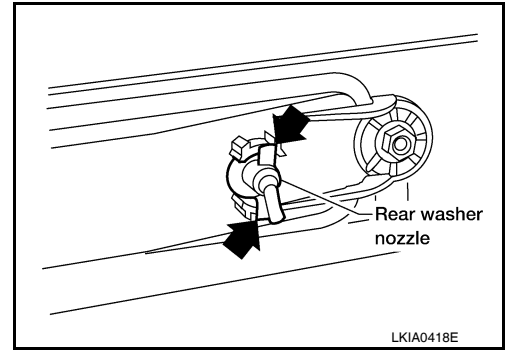

## Installation



1. Install rear washer nozzle.
2. Connect rear washer hose.
3. Install back door upper finisher. Refer to [INT-25. "Removal and Installation"](#).

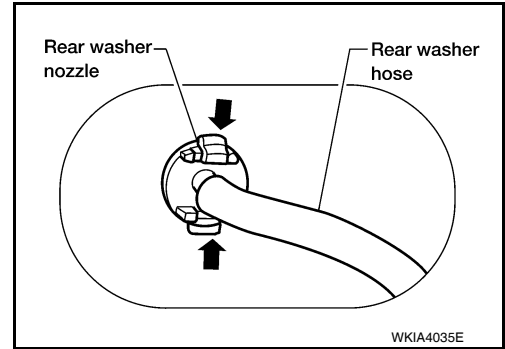

## REAR WASHER NOZZLE ADJUSTMENT

- Adjust washer nozzle with suitable tool as shown.

**Adjustable range :  $\pm 15^\circ$  (In any direction)**

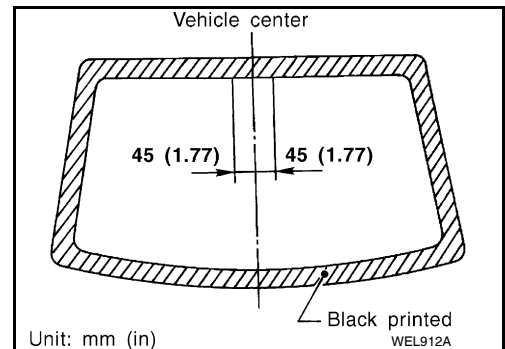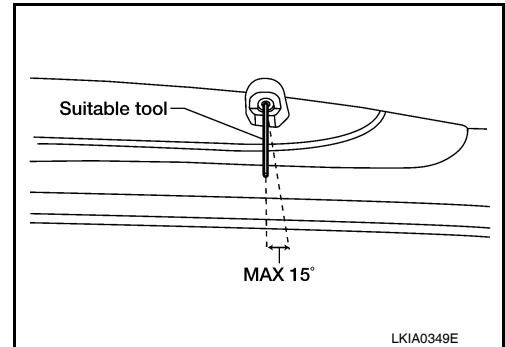

## FRONT AND REAR WASHER MOTOR

Refer to [WW-74. "Removal and Installation"](#).

## WIPER AND WASHER SWITCH

Refer to [WW-26. "Component Inspection"](#).

## WASHER FLUID RESERVOIR

Refer to [WW-74. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

# REAR WIPER AND WASHER SYSTEM

< ON-VEHICLE REPAIR >

## Rear Washer Nozzle Adjustment

INFOID:000000003084571

- Adjust washer nozzle with suitable tool as shown in the figure.

**Adjustable range :  $\pm 15^\circ$  (In any direction)**

