



SERVICE MANUAL

DATSUN 260Z
MODEL S30 SERIES



NISSAN MOTOR CO., LTD.
TOKYO, JAPAN

SECTION WT

WHEEL AND TIRE

WT

WHEEL AND TIRE	WT- 2
TROUBLE DIAGNOSES AND CORRECTIONS	WT- 5

WHEEL AND TIRE

CONTENTS

DESCRIPTION	WT-2	RADIAL TIRE	WT-3
MAINTENANCE AND SERVICE	WT-2	TIRE ROTATION	WT-3
TIRE INFLATION	WT-2	INSPECTION	WT-3
TUBELESS TIRE REPAIR	WT-2	WHEEL BALANCE	WT-3
WHEEL REPAIR	WT-3	WHEEL AND TIRE	WT-4
WEAR	WT-3		

DESCRIPTION

This model series cars have 14-inch diameter wheels with five bolts securing on 114.3 mm (4.50 in) bolt circle. The wheel size for tires is a 14x5J with a 15 mm (0.95 in) offset.

Tire size

Tire size	Disc wheel
175HR-14 (Tubeless)	5J-14

Tire pressure

	175HR-14
Under 160 km/h (100 MPH)	2.0 kg/cm ² (28 psi)
Over 160 km/h (100 MPH)	2.3 kg/cm ² (33 psi)

Notes:

- a. The tire inflation pressures should be measured under tire cold condition.

MAINTENANCE AND SERVICE

TIRE INFLATION

Correct tire pressure is very important to ease of steering and riding comfort. This also reduces driving sound to a minimum, resulting in longer tire life; that is, overinflation or underinflation promotes the wear at

center tread or shoulder of tire.

If all tires are inspected frequently and given correct pressure, it is possible to detect sharp material in the tread. Also, the above check avoids abnormal wear inviting serious damage. If tires indicate abnormal or uneven wear, the cause of damage should be detected and eliminated.


After inflating tires, leakage in valve should be checked. Without valve caps, leakage will occur due to dirt and water, resulting in underinflation. Accordingly, whenever tire pressure is checked, be sure to tighten valve caps firmly by hand.

soapy solution to tire or submerge tire and wheel in the water, after inflating tire to specified pressure. Special inspection for leaks should be carried out around the valve, wheel rim and along the tread. Exercise care to bead and rim where leakage occurs. Wipe out water from area which leaks air bubbles and then mark the place with chalk.


After removing the materials which caused puncture, seal the point to avoid damage to the tire due to entrance of dirt and water. When repairing the punctured tire, use the tire repair kits which are furnished from tire dealers, following the instructions provided with the kits. In case that a puncture becomes large or there is any other damage to the tire fabric, the repair must be carried out by authorized tire dealers.

TUBELESS TIRE REPAIR


In order to inspect a leak, apply

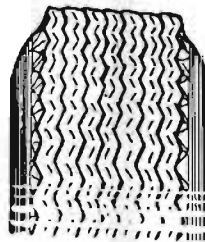


Toe-in or toe-out wear

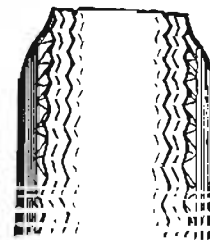

Overinflation wear

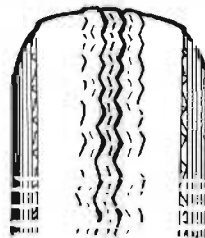

Underinflation wear

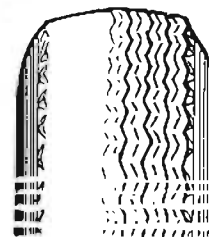

Uneven wear

WT004

Fig. WT-1 Abnormal tire wear

WHEEL REPAIR

Inspect wheel rim flange for bend or dents. If the above deterioration is detected, repair should be made to secure complete sealing. The flange should be cleaned by a wire brush when rust is found on the flange. Furthermore, if excessive pitting occurs on the rim, eliminate it with a file.

WEAR

Misalignment

When the front wheels align in excessive toe-in or toe-out condition, tires scrape the tread rubber off. The wear of tread appears feathered edge.

Center

This wear is caused by overinflation of the tire. The inflation pressure must be kept within the specified limit.

Shoulder

The wear may be caused by underinflation, incorrect wheel camber, or continuous high speed driving on curves. In general, the former two are common. Because underinflation wear appears on both sides of tread, and on the other hand, camber wear appears only on one tread side. To prevent cornering tread wear, the driver must operate car slowing down on curves.

Uneven

Uneven wear is caused by incorrect camber or caster, malfunctioning suspension, unbalanced wheel, out-of-round brake drum, or other mechanical conditions. To repair this abnormal wear, correct the above faulty parts.

RADIAL TIRE

Tires of radial ply construction will revolve with less camber power and with greater cornering power on turns. Since this tends to cause local or rapid wear on the treads with excessive toe-in, exercise special care for front wheel alignment during the life of tires.


Notes:

- a. Radial ply tires should not be mixed with ordinary tires since their characteristics differ from those of ordinary tires.
- b. The same brand radial ply tires should be installed on all wheels.
- c. The tubes designed for radial tire should be used exclusively.
- d. Snow chain should not be fitted because it damages side wall.

TIRE ROTATION

Tires wear unevenly and become unbalanced in accordance with running distance. This may cause tire noise which is attributed to rear axle gears, bearing, etc. Meanwhile, the front tires tend to wear unevenly because of improperly aligned front wheel.


Accordingly, to equalize tire wear, it is necessary to rotate tires every 10,000 km (6,000 miles) of operation.

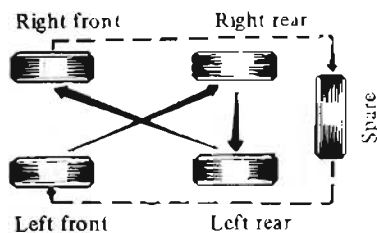

WH009

Fig. WT-2 Tire rotation

The tires are provided with "tread wear indicator" at six places around tire circumference, indicating 1.6 mm (0.063 in) tread depth. When the tires wear and then the marks appear, replace them with new ones.

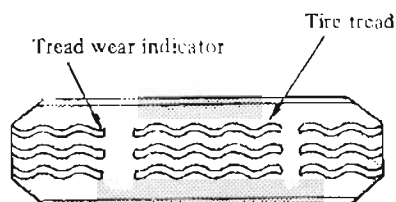

WH024

Fig. WT-3 Tread wear indicator

To change tire with wheel using a jack in the safe manner, observe the following procedures:

1. Apply parking brake and block front wheels when rear wheel is being changed.
2. Remove wheel cap and loosen wheel nuts.
3. Place jack at jacking point instructed under "General Information" and raise car until wheel clears ground.
4. Remove wheel nuts and wheel from drum.
5. To install wheel, reverse the above steps. Tighten wheel nuts in criss-cross fashion to 8.0 to 9.0 kg-m (58 to 65 ft-lb).

Note: Never get under the car while it is supported only by the jack. Always use safety stands to support the side member of body construction when you must get under the car.

INSPECTION

WHEEL BALANCE

The wheel and tire assembly should be kept on static and dynamic balancing. The above balance is very important to drive the car at high speeds. Consequently, wheel and tire assembly should be rebalanced after puncture is repaired.

The balance of wheel and tire assembly changes as the uneven tire wear. Severe acceleration and braking, or fast cornering makes wear, resulting in unbalance. The symptom of unbalance appears as tramp, car shake or steering problem.

In balancing wheels, notice that the static balancing should be specified as listed below:

Maximum allowable static unbalance: 177 gr-cm (2.5 in-oz)
Balance weight:
10 to 80 gr (0.35 to 2.82 oz) at every 10 gr (0.35 oz) interval

To correct static unbalance, use wheel balancer. In this case, maximum balance weight (80 gr, 2.82 oz) is available at two places of outside rim flange.

When dynamic balance is required, the specified values such as maximum allowable dynamic unbalance and balance weights, are the same as static balancing ones. Furthermore, testing and correcting dynamic unbalance are by the use of dynamic wheel balancers. However, maximum balance weight (80 gr, 2.82 oz) is available at two places each of outside and inside rim flange respectively.

might cause air leaks. Function of tubeless tire depends on a good seal between tire bead and wheel rim. Thoroughly remove rust, dust, oxidized rubber or sand from wheel rim with wire brush, emery cloth or paper. Use dial gauge to examine wheel rim for lateral and diametrical run-out.

Note: In replacing tire, take extra care not to damage tire bead, rim flange and bead seat.

Therefore, do not use tire irons to force beads away from wheel rim flange; that is, always use tire replacement device whenever tire is removed.


WHEEL AND TIRE

In order to ensure satisfactory steering condition as well as maximum tire life, proceed as follows:

1. Check wheel rim, especially, rim flange and bead seat for rust, distortion, cracks or other damage which

2. Discard when any of the following conditions occur;

- (1) Broken or damaged bead wire.
- (2) Ply or tread separation.
- (3) Worn fabric injuries on tubeless tire.
- (4) Cracked or damaged sidewall, etc.

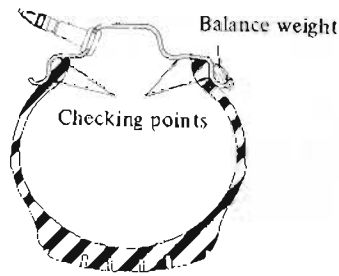

WT005

Fig. WT-4 Wheel rim run-out checking points

TROUBLE DIAGNOSES AND CORRECTIONS

Condition	Probable cause	Corrective action
<p>Wheel wobbles.</p>	<p>Improper tire pressure. Damaged tire or distorted wheel rim. Unbalanced wheel. Loose wheel nuts. Worn or damaged wheel bearing, or excessive play of wheel bearing. Improper front wheel alignment. Worn or damaged ball joint. Excessive steering linkage play or worn steering linkage. Loose steering linkage connection. Broken suspension spring. Faulty shock absorber.</p>	<p>Measure and adjust correctly. Repair or replace. Balance or replace. Tighten. Correct play or replace wheel bearing. Align correctly. Replace. Adjust or replace. Tighten the nuts to the rated torque, or replace worn parts if any. Replace. Replace.</p>
<p>Unevenly or excessively worn tire.</p>	<p>Improper tire rotation. Improper tire pressure. Unbalanced wheel. Improperly adjusted brake. Improper wheel alignment. Excessively distorted or improperly installed suspension link. High speed on curves. Sudden start and improper speed due to rapid acceleration or improper brake application.</p>	<p>Conduct tire rotation periodically. [Standard; every 10,000 km (6,000 miles)]. Measure and adjust correctly. Balance or replace. Adjust correctly. Align correctly. Repair or replace if necessary, or reinstall correctly. Reduce speed. Follow correct and proper driving manner.</p>
<p>Tire squeals.</p>	<p>Improper tire pressure. Improper front wheel alignment. Distorted knuckle or suspension link.</p>	<p>Measure and adjust correctly. Align correctly. Repair or replace if necessary.</p>