

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SECTION HRN

## HORN

## CONTENTS

<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>2</b>	<b>FOR USA AND CANADA .....</b>	<b>8</b>
<b>HORN .....</b>	<b>2</b>	FOR USA AND CANADA : Precaution for Supple- mental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	8
<b>EXCEPT FOR MEXICO .....</b>	<b>2</b>	<b>FOR MEXICO .....</b>	<b>8</b>
EXCEPT FOR MEXICO : Wiring Diagram - HORN - .....	2	FOR MEXICO : Precaution for Supplemental Re- straint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	8
<b>FOR MEXICO .....</b>	<b>4</b>	<b>REMOVAL AND INSTALLATION .....</b>	<b>10</b>
FOR MEXICO : Wiring Diagram - HORN - .....	5	<b>HORN .....</b>	<b>10</b>
<b>PRECAUTION .....</b>	<b>8</b>	Exploded View .....	10
<b>PRECAUTIONS .....</b>	<b>8</b>	Removal and Installation .....	10

HRN

# HORN

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS


HORN

EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Wiring Diagram - HORN -

INFOID:0000000005256772

HORN (EXCEPT FOR MEXICO)

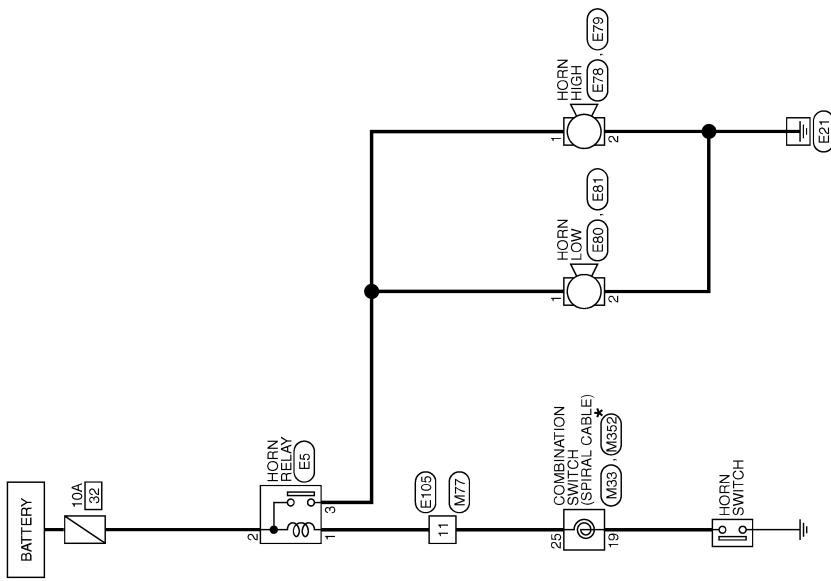

\* .This connector is not shown in "Harness Layout".

2008/07/15


JCLWM2570GE

# HORN

< DTC/CIRCUIT DIAGNOSIS >

## HORN (EXCEPT FOR MEXICO)

Connector No.	E5	Connector No.	E78
Connector Name	HORN RELAY	Connector Name	HORN HIGH
Connector Type	-	Connector Type	P01FB-A

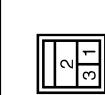

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	G	-

Connector No.	E79	Connector No.	E80
Connector Name	HORN HIGH	Connector Name	HORN LOW
Connector Type	P01FB-A	Connector Type	P01FB-A



Connector No.	E81	Connector No.	M33
Connector Name	HORN LOW	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	P01FB-A	Connector Type	TK385GY-IV




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	-	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	M77	Connector No.	M77
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4	Connector Type	TH80WW-CS16-TM4

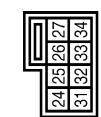


Terminal No.	Color of Wire	Signal Name [Specification]
24	GR	-
25	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
26	GR	-
27	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
31	GR	-
32	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
33	GR	-
34	GR	-

Connector No.	E105	Connector No.	M33
Connector Name	WIRE TO WIRE	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TH80FW-CS16-TM4	Connector Type	TK385GY-IV

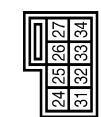

Terminal No.	Color of Wire	Signal Name [Specification]
24	GR	-
25	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
26	GR	-
27	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
31	GR	-
32	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
33	GR	-
34	GR	-

HRN

M

Z

O

P

A

B

D

T

G

I

K

L

N

R

M

Z

O

P

# HORN

< DTC/CIRCUIT DIAGNOSIS >

---

## HORN (EXCEPT FOR MEXICO)

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY



Terminal No.	Color of Wire	Signal Name [Specification]
19	-	-

JCLWM2572GE

FOR MEXICO


# HORN

< DTC/CIRCUIT DIAGNOSIS >

FOR MEXICO : Wiring Diagram - HORN -

INFOID:0000000005256773

HORN (FOR MEXICO)

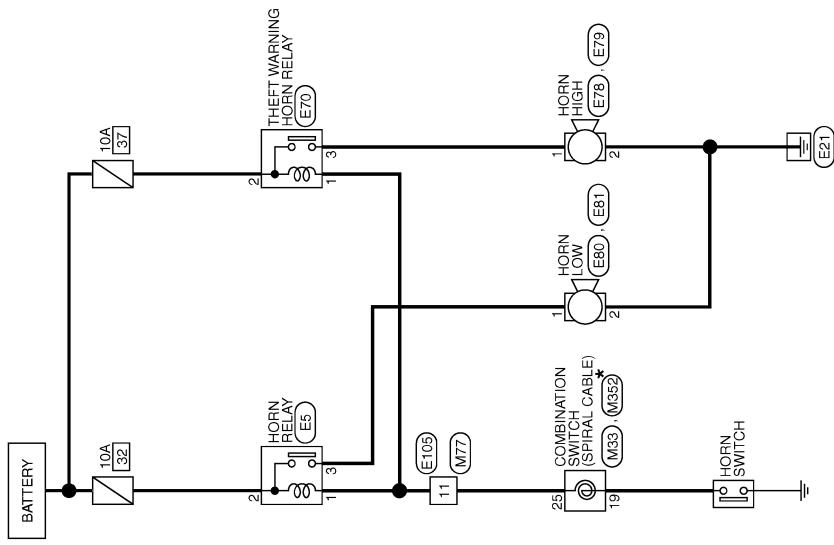

\* : This connector is not shown in "Harness Layout".

2008/07/15

JCLWM2573GE

# HORN

< DTC/CIRCUIT DIAGNOSIS >

## HORN (FOR MEXICO)

Connector No.	E5	Connector No.	E79
Connector Name	HORN RELAY	Connector Name	HORN HIGH
Connector Type	-	Connector Type	P01FB-A



Connector No.	E70	Connector No.	E78
Connector Name	THEFT WARNING HORN RELAY	Connector Name	HORN HIGH
Connector Type	M03FW-R-LC	Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	G	-



Connector No.	E50	Connector No.	E81
Connector Name	HORN LOW	Connector Name	HORN LOW
Connector Type	P01FB-A	Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
1	G	-
3	-	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	R	-
3	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	R	-
3	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	R	-
3	G	-

Connector No.	E105	Connector No.	M33
Connector Name	WIRE TO WIRE	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TH300W-OS16-TM4	Connector Type	TK0FGY-IV



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
1	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
1	GR	-

Terminal No.	Color of Wire	Signal Name [Specification]
24	25	26
25	26	27
31	32	33
32	33	34

Terminal No.	Color of Wire	Signal Name [Specification]
24	25	26
25	26	27

Terminal No.	Color of Wire	Signal Name [Specification]
25	GR	-
26	-	-

# HORN

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

K

HRN

M

N

O

P

HORN (FOR MEXICO)			
Connector No.	M77	Connector No.	M352
Connector Name	WIRE TO WIRE	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	THBDMW-CS16-TM4	Connector Type	TK08F6Y
			
			
Terminal No.	Color of Wire	Signal Name [Specification]	
11	GR	-	
Terminal No.	Color of Wire	Signal Name [Specification]	
19	-	-	

JCLWM2575GE

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005256774

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

## FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005256775

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s)

## PRECAUTIONS

### < PRECAUTION >

- with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

HRN

M

N

O

P

## HORN


< REMOVAL AND INSTALLATION >

# REMOVAL AND INSTALLATION

## HORN

### Exploded View

INFOID:0000000005256776

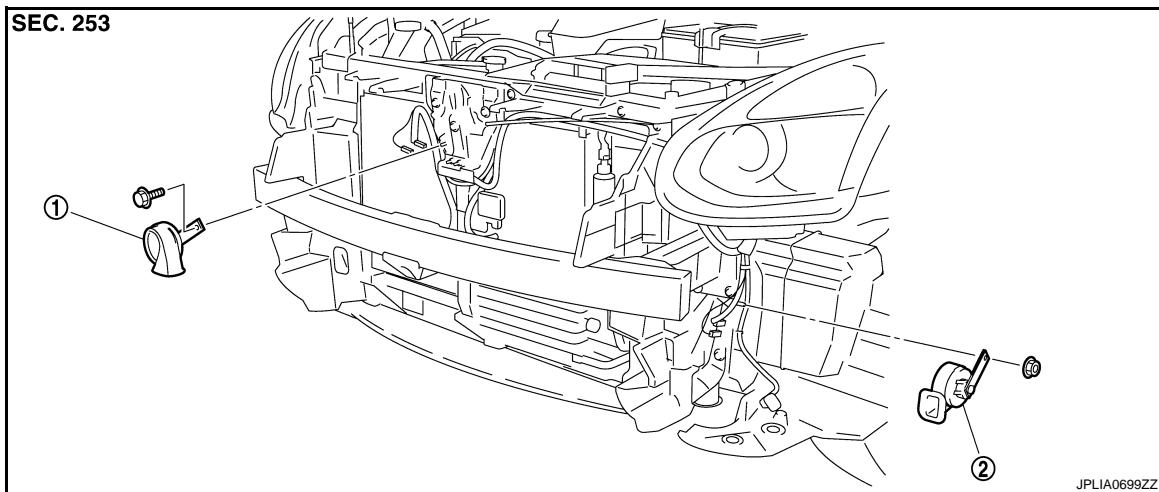

1. Horn (LO)

2. Horn (HI)

### Removal and Installation

INFOID:0000000005256777

#### REMOVAL

##### Horn (LO)

1. Remove the front bumper fascia upper clips. And lift the front bumper fascia up and hold to keep a service area. Refer to [EXT-13, "Exploded View"](#).
2. Disconnect the horn (LO) connector.
3. Remove the horn mounting bolt, and remove the horn (LO) from the vehicle.

##### Horn (HI)

1. Remove the fender protector LH (front). Refer to [EXT-22, "Exploded View"](#).
2. Disconnect the horn (HI) connector.
3. Remove the horn mounting nut, and remove the horn (HI) from the vehicle.

#### INSTALLATION

Install in the reverse order of removal.